

## DISASSEMBLY

### 1. REMOVE 2 FUEL PUMPS FROM PUMP BRACKET

- (a) Pull out the lower side of each fuel pump from the pump bracket.
- (b) Disconnect the fuel hose and connector from each fuel pump, and remove the fuel pump.
- (c) Remove the rubber cushion from each fuel pump.

### 2. REMOVE FUEL PUMP FILTER FROM FUEL PUMP

Remove the clip and pull out the filter from each fuel pump.