

REMOVAL

1. REMOVE FRONT FENDER WHEEL OPENING MOULDING

- (a) Remove the front side panel moulding. (See page BO-57)
- (b) Remove the 6 screws and front fender wheel opening moulding.

2. REMOVE QUARTER PANEL WHEEL OPENING MOULDING

- (a) Remove the quarter outside moulding. (See page BO-57)
- (b) Remove the 6 screws and quarter panel wheel opening moulding.