


AIR REFINER FILTER (for Rear Cooler)

REMOVAL

AC257-01

1. REMOVE LUGGAGE COMPARTMENT FRONT COVER
(See [page BO-43](#))

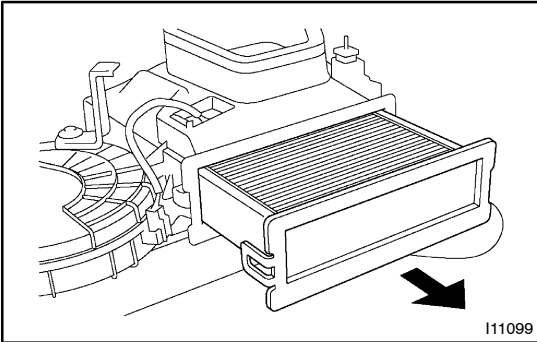

2. REMOVE AIR REFINER FILTER
Release the 2 claws, then pull out the filter.