

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

NOTICE:

When replacing skid control ECU, sensor or etc., turn the ignition switch OFF.

Symptom	Suspect Area	See Page
ABS does not operate	Only when 1. to 4. are all normal and the problem still occurs, replace the skid control ECU. 1. Check the DTC again and make sure that the normal code is output. 2. IG power source circuit 3. Speed sensor circuit 4. Check the brake actuator with a hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-103).	DI-3 DI-60 DI-21 BR-1
ABS does not operate efficiently	Only when 1. to 4. are all normal and the problem still occurs, replace the skid control ECU. 1. Check the DTC again and make sure that the normal code is output. 2. Speed sensor circuit 3. Stop light switch circuit 4. Check the brake actuator with a hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-103).	DI-3 DI-21 DI-72 BR-1
ABS warning light abnormal	1. ABS warning light circuit 2. Skid control ECU	DI-86 IN-31
DTC check cannot be done	Only when inspection circuits for each problem symptom are all normal and the problem still occurs, replace the skid control ECU. 1. ABS warning light circuit 2. VSC warning light circuit	DI-86 DI-81
Speed sensor signal check cannot be done	1. Ts terminal circuit 2. Skid control ECU	DI-101 IN-31
TRC does not operate	If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU. 1. Check the DTC again and make sure that the normal code is output. 2. IG power source circuit 3. Check the hydraulic circuit for leakage. 4. Speed sensor circuit	DI-3 DI-60 DI-103 DI-21
VSC does not operate	Only when inspection circuits for each problem symptom are all normal and the problem still occurs, replace the skid control ECU. 1. Check the DTC again and make sure that the normal code is output. 2. IG power source circuit 3. Check the hydraulic circuit for leakage. 4. Speed sensor circuit 5. Deceleration sensor circuit 6. Yaw rate sensor circuit 7. Steering angle sensor circuit	DI-3 DI-60 DI-103 DI-21 DI-64 DI-56 DI-51
BA does not operate	Stop light switch circuit	DI-72

SLIP indicator light abnormal	<ol style="list-style-type: none"> 1. SLIP indicator light circuit 2. Skid control ECU 	<p>DI-92 IN-31</p>
TRC OFF indicator abnormal	<p>If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU.</p> <ol style="list-style-type: none"> 1. Check the DTC again and make sure that the normal code is output. 2. TRC OFF switch circuit 	<p>DI-3 DI-89</p>
DTC of VSC check cannot be done	<p>If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU.</p> <ol style="list-style-type: none"> 1. Check the DTC again and make sure that the normal code is output. 	<p>DI-3</p>
VSC warning light abnormal	<p>If the symptoms still occur even after the following circuits in suspect areas are inspected and proved to be normal, replace the skid control ECU.</p> <ol style="list-style-type: none"> 1. Check the DTC again and make sure that the normal code is output. 2. VSC warning light circuit 	<p>DI-3 DI-94</p>