

 



 
 
 


**AUTOMATIC TRANSMISSION (A342E)****SST (Special Service Tools)**

PP22E-01

	09032-00100	Oil Pan Seal Cutter	
	09308-00010	Oil Seal Puller	
	(09316-00011)	Replacer Pipe	
	(09316-00051)	Replacer "D"	
	09330-00021	Companion Flange Holding Tool	
	09350-30020	TOYOTA Automatic Transmission Tool Set	
	(09351-32010)	One-way Clutch Test Tool	
	(09351-32020)	Stator Stopper	
	09517-36010	Rear Axle Shaft Oil Seal Replacer-	