


REMOVAL

1. REMOVE WATER PUMP (See page CO-5)
2. REMOVE ALTERNATOR (See page EM-14)
3. REMOVE V-BELT TENSIONER NO. 2

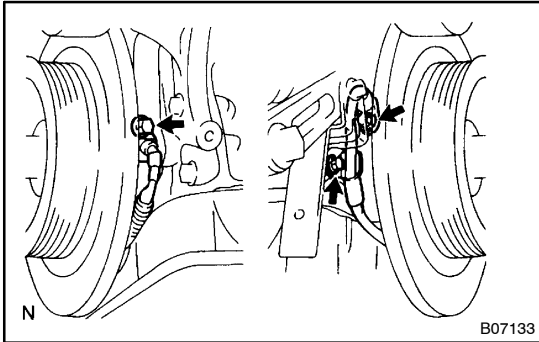

4. REMOVE CRANKSHAFT POSITION SENSOR
 - (a) Disconnect the crankshaft position sensor connector.
 - (b) Remove the 3 bolts and crankshaft position sensor.**Torque: 8.0 N·m (80 kgf·cm, 69 in·lbf)**