

REMOVAL


1. REMOVE ROCKER PANEL MOULDING PROTECTOR
Remove the 2 screws, nut and rocker panel moulding protector.

2. REMOVE ROCKER PANEL MOULDING

- (a) Apply protective tape to the outside circumference of the moulding.
- (b) Using a heat light, heat the moulding to 40 – 60 °C (104 – 140 °F).

NOTICE:

Do not heat the moulding excessively.

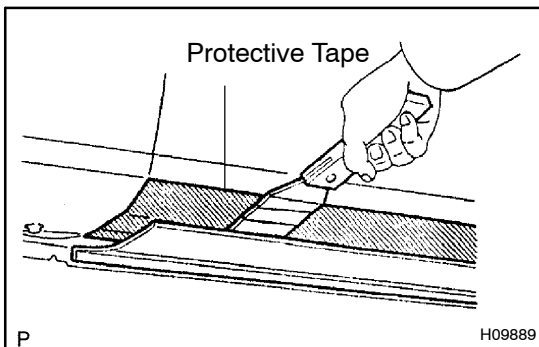

- (c) Using a scraper, break the No.3 outside moulding clips and slowly remove the rocker panel moulding while separating attached part with the adhesive tape.

HINT:

Tape the scraper tip before use.

- (d) Remove the No.3 outside moulding retainers.