


REPLACEMENT

Except Europe Models:

REMOVE CENTER STOP LIGHT ASSEMBLY

- (a) Remove the bulb socket and then the bulb.
- (b) Europe Models:
Remove the LED.

Insert the clip remover with protective tape being wound into the joint between the center stop light assembly and package tray trim panel assembly, gauge the clip remover upwards to disconnect the front two pins.

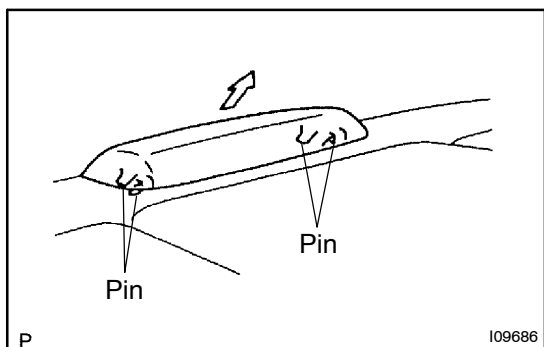

- (c) Pull the center stop light assembly towards the front of vehicle to disconnect the four pins, disconnect the connector and remove the center stop light assembly.