


WATER VALVE CONTROL SERVOMOTOR INSPECTION


AC24N-01

1. REMOVE INSTRUMENT PANEL (See page BO-96)

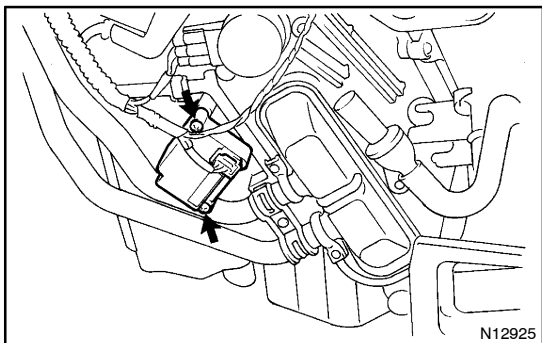

2. REMOVE WATER VALVE CONTROL SERVOMOTOR
 - (a) Disconnect the connector.
 - (b) Disconnect the control cable.
 - (c) Remove the 2 screws and servomotor.

3. INSPECT WATER VALVE CONTROL SERVOMOTOR CIRCUIT (See page DI-825)

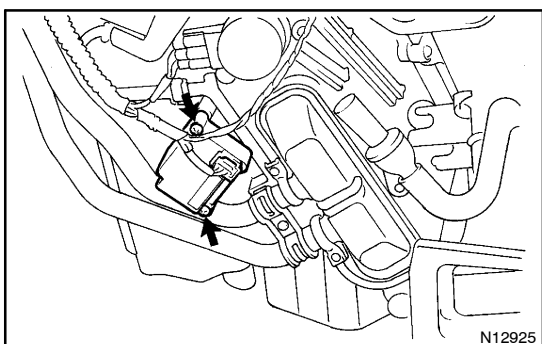

4. INSTALL WATER VALVE CONTROL SERVOMOTOR
 - (a) Install the servomotor with the 2 screws.
 - (b) Connect the control valve.
 - (c) Connect the connector.

5. INSTALL INSTRUMENT PANEL (See page BO-105)