


## Door key lock and unlock switch circuit

### CIRCUIT DESCRIPTION


The door key lock and unlock switch is built in the door key cylinder. When the key is turned to the lock side, terminal 3 of the switch is grounded and when the key is turned to the unlock side, terminal 2 of the switch is grounded.

Door key lock and unlock switch can be checked using DTC check. (Refer to DI-733)

### WIRING DIAGRAM

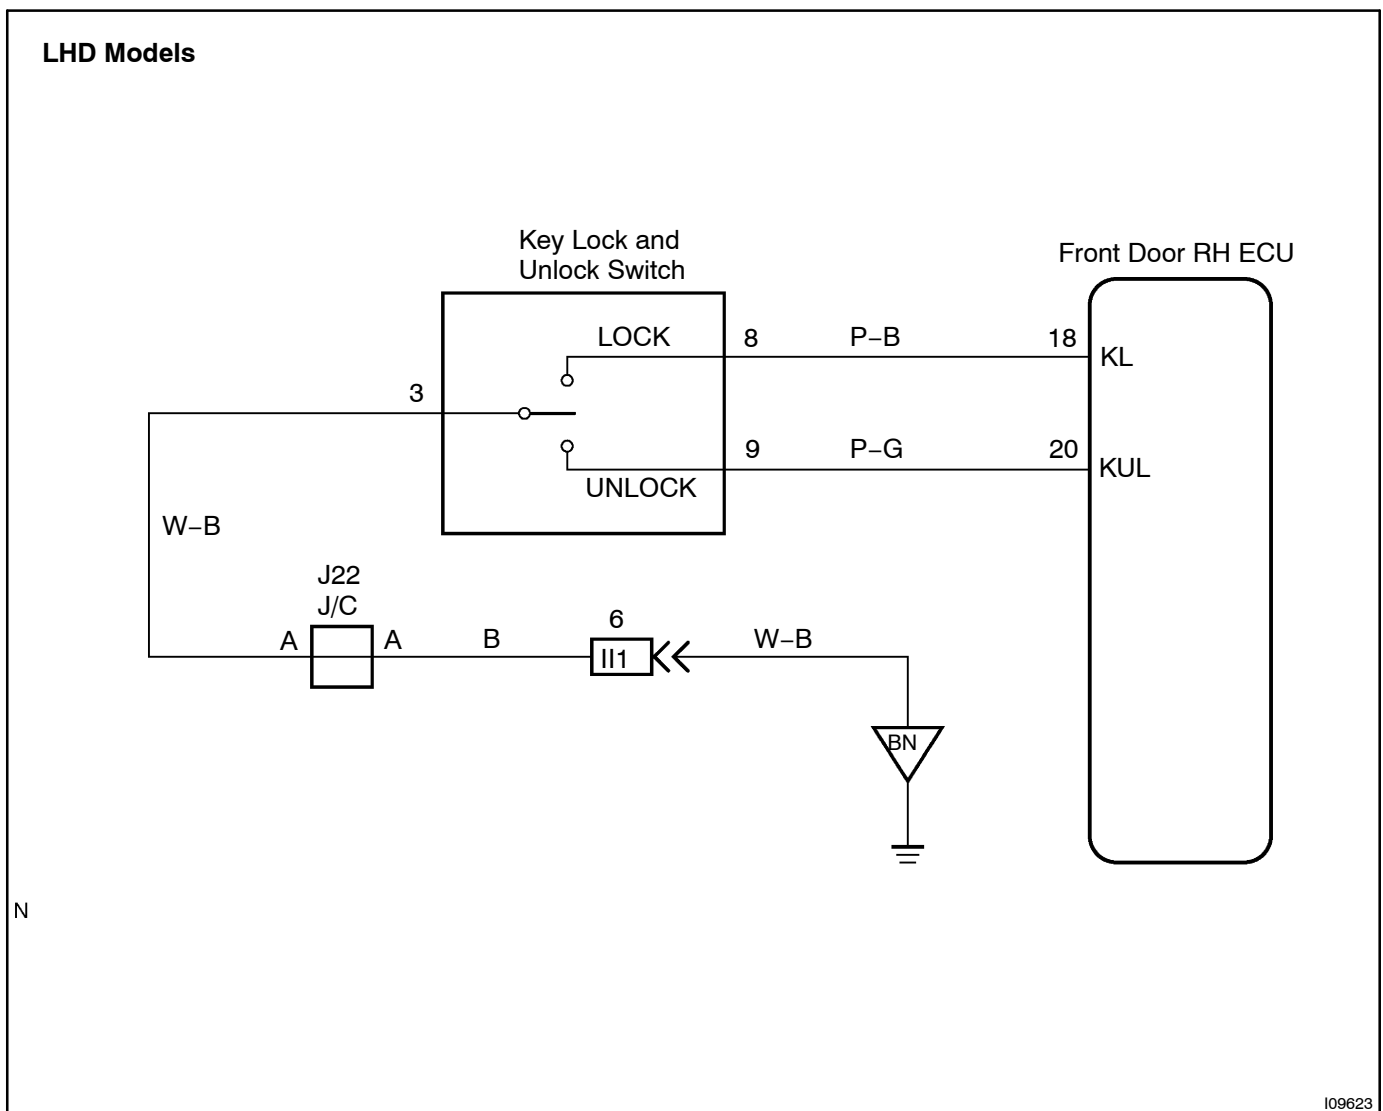

RHD Models

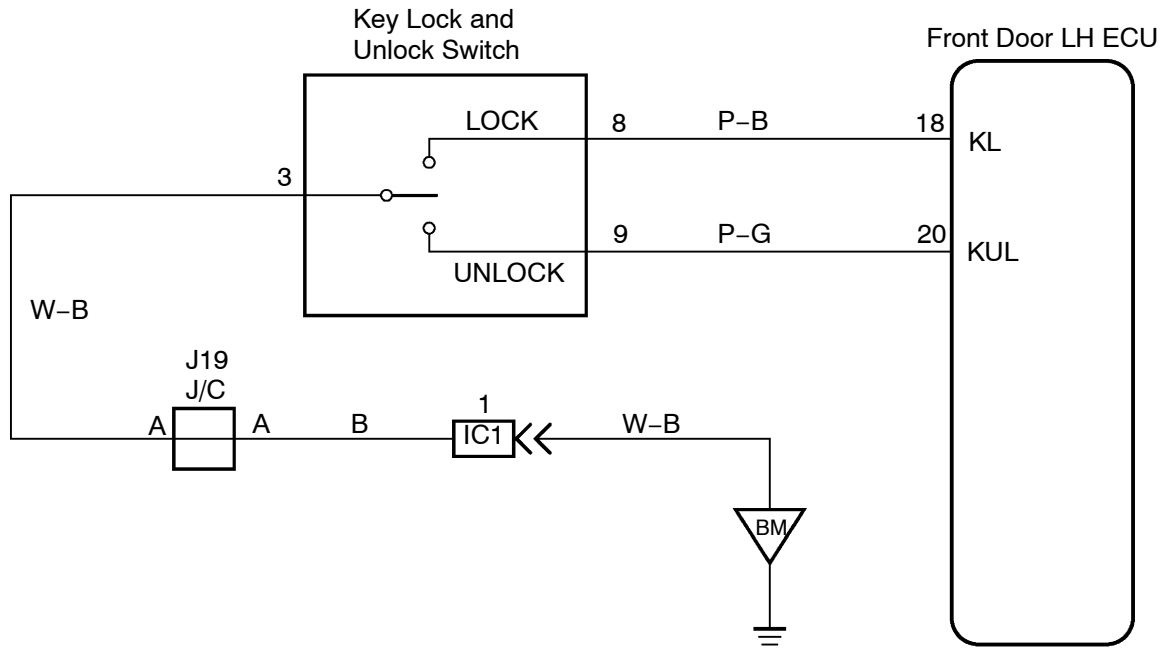

N

## INSPECTION PROCEDURE

1 Check the door key lock and unlock switch using DTC check (See page DI-733).

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-584).

NG

2 Check the door key lock and unlock switch (See page BE-92).

NG

Replace the door key lock and unlock switch.

NG

3 Check wireharness and connector between door key lock and unlock switch and passenger door ECU (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-584).