



REMOVAL

1. REMOVE FRONT FENDER LINER

Remove the screws and then a part of front side of the fender liner.

HINT:

Remove the fender liner in a range that the fender mirror can be removed.

2. REMOVE OUTER REAR VIEW MIRROR

- (a) Disconnect the connector.
- (b) Remove the nut and outer rear view mirror assembly.

Torque: 2.0 N·m (20 kgf·cm, 17 in·lbf)

3. REMOVE OUTER MIRROR GASKET

4. REMOVE OUTER MIRROR SPRING