

DISASSEMBLY

1. **REMOVE LUGGAGE COMPARTMENT DOOR MOULDING**
2. **REMOVE THE REAR COMBINATION LIGHT SERVICE COVER**
3. **REMOVE COMBINATION LIGHT ASSEMBLY**
 - (a) Remove the 2 hole plugs.
 - (b) Remove the 4 nuts.
 - (c) Disconnect the connectors, then remove the combination light assembly.
4. **REMOVE DOOR LOCK CLOSER**
 - (a) Disconnect the connector.
 - (b) Remove 4 bolts and door lock closer.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)