

REMOVAL

1. REMOVE V-BANK COVER AND AIR CLEANER HOSE LH WITH AIR INTAKE AIR RESONATOR
2. REMOVE FUEL PRESSURE REGULATOR
 - (a) Disconnect the vacuum hose.
 - (b) Remove the union bolt and 2 gaskets, and disconnect the return tube.
 - (c) Remove the pressure regulator and O-ring.