


# Hi-mounted stop circuit

## CIRCUIT DESCRIPTION

Receiving the brake pedal signal from either of the rear light LH ECU, the rear light RH ECU will make the hi-mounted stop light come on.

## WIRING DIAGRAM

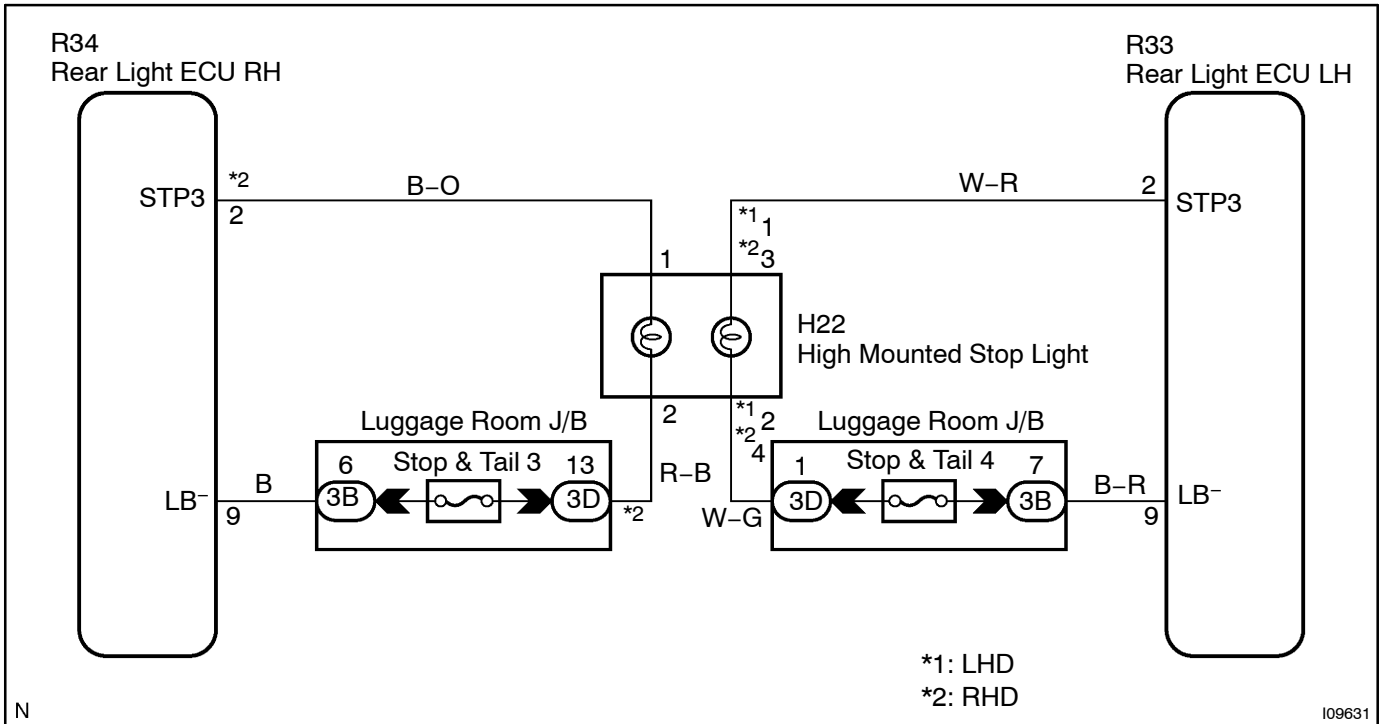

**INSPECTION PROCEDURE**

1 Check hi-mounted light (See page BE-2).

NG

Replace the failure light.

OK

2 Check wireharness and connector between hi-mounted stop light and rear light ECU, battery and hi-mounted stop light (See page N-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-693).