
AIR REFINER FILTER (for Front A/C) REMOVAL

AC255-0

1. REMOVE GLOVE COMPARTMENT DOOR (See page BO-96)

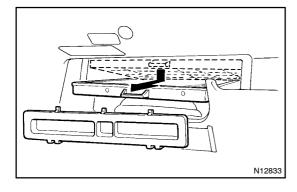

2. REMOVE AIR REFINER FILTER

- (a) Remove the filter cover.
- (b) Pull out the filter assembly.
- (c) Remove the filter from filter case.

CAUTION:

Confirm the blower switch is off, when removing the filter.