

RS0H8-01

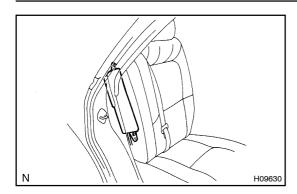

### INSPECTION


### 1. VEHICLE NOT INVOLVED IN COLLISION

- (a) Do a diagnostic system check. (See page DI-229)
- (b) Do a visual check which includes the following item with the rear side airbag assembly installed in the vehicle. Check cuts, minute cracks or marked discoloration on the rear side airbag assembly.

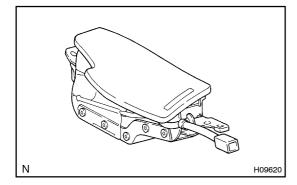

## 2. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS NOT DEPLOYED

- (a) Do a diagnostic system check. (See page DI-229)
- (b) Do a visual check which includes the following items with the rear side airbag assembly removed from the vehicle.
  - Check cuts and cracks of the rear side airbag assembly.
  - Check cuts and cracks in wire harness, and chipping in connectors.
  - Check the deformation or cracks on the body that the rear side airbag assembly installed to.

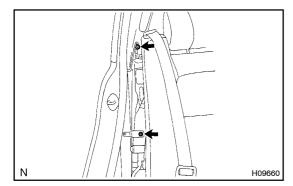

#### HINT:

If the body that the rear side airbag was installed to is deformed or cracked, repair or replace it.

#### **CAUTION:**

For removal and installation of the rear side airbag assembly, see page RS-51 and RS-60. Be sure to follow the correct procedure.

# 3. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED

- (a) Do a diagnostic system check. (See page DI-229)
- (b) Do a visual check which includes the following items with the seatback assembly removed from the vehicle.
  - Check the deformation or cracks on the body that the rear side airbag assembly installed to.
  - Check the damage to the connector and wire harness.

#### HINT:

If the body that the rear side airbag was installed to is deformed or cracked, replace it.