


REMOVAL

1. REMOVE FRONT RIGHT WHEEL
2. REMOVE FRONT RIGHT FENDER LINER
3. REMOVE HEIGHT CONTROL COMPRESSOR AND DRYER
 - (a) Disconnect the 2 connectors.
 - (b) Disconnect the air tube.
 - (1) Remove the holder.
 - (2) Spread the clip and pull the air tube out straightly and slowly.


NOTICE:

Do not get scratches or foreign particles.

- (3) Remove the 2 O-rings.
- (4) Remove the clip.
- (c) Remove the filter and tubes.

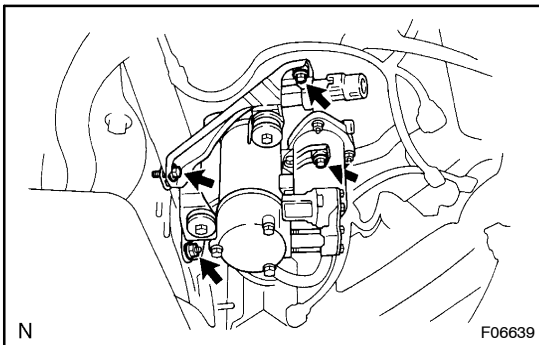

- (d) Remove the 3 bolts, 2 nuts and the height control compressor and dryer with the bracket.

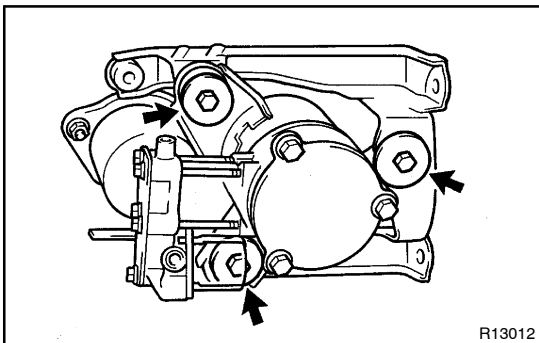

- (e) Remove the 3 bolts, bushings and bracket from the height control compressor.
- (f) Remove the bolt and the dryer from the height control compressor.

NOTICE:

Slowly pull out the dryer along the dryer axis.

- (g) Remove the O-ring.
4. REMOVE 2 SPACERS AND BUSHINGS FROM BRACKET