


INSPECTION

NOTICE:

When using a vise, do not overtighten it.

1. INSPECT STEERING LOCK OPERATION

Check that the steering lock mechanism operates properly.

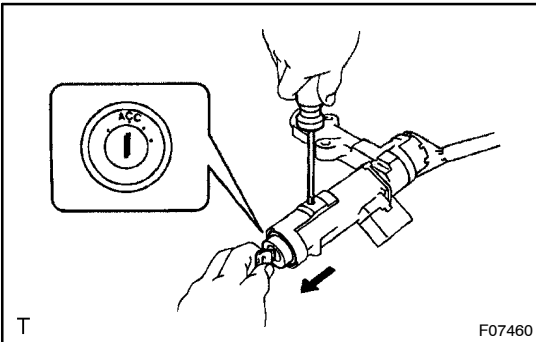

2. IF NECESSARY, REPLACE KEY CYLINDER

- Place the ignition key at the ACC position.
- Using a screwdriver, push down the stop pin of the cylinder, and pull out the key cylinder.
- Install a new cylinder.

HINT:

Make sure the key is at the ACC position.

3. INSPECT IGNITION SWITCH

(See page BE-21)

4. INSPECT KEY UNLOCK WARNING SWITCH

(See page BE-21)

5. IF NECESSARY, REPLACE IGNITION SWITCH ASSEMBLY

- Remove the 3 screws and ignition switch assembly.
- Install a new ignition switch assembly with the 3 screws.

6. INSPECT KEY INTERLOCK SOLENOID

(See page AT-19)

7. IF NECESSARY, REPLACE KEY INTERLOCK SOLENOID

- Remove the 2 screws and key interlock solenoid.
- Install a new key interlock solenoid with the 2 screws.

8. INSPECT TRANSPONDER KEY COIL

(See page BE-205)

9. IF NECESSARY, REPLACE TRANSPONDER KEY COIL