


AIR CONDITIONER AMPLIFIER (for Rear A/C)

INSPECTION


AC254-01

1. REMOVE LUGGAGE COMPARTMENT FRONT COVER
(See page BO-43)

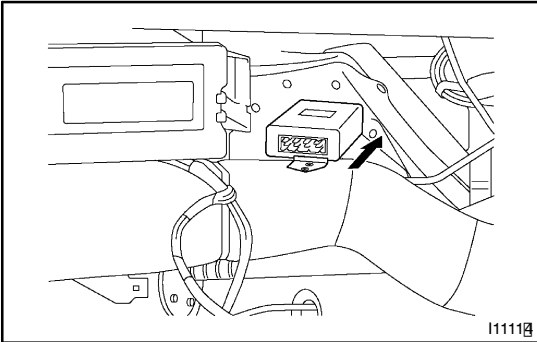

2. REMOVE A/C AMPLIFIER
 - (a) Disconnect the connector.
 - (b) Release the claw and pull out the A/C amplifier.

3. INSPECT REAR A/C AMPLIFIER CIRCUIT
(See page DI-774)

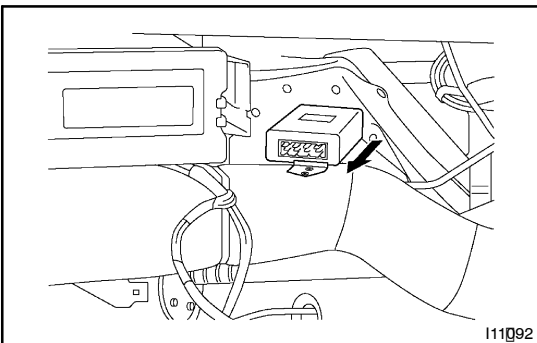

4. INSTALL A/C AMPLIFIER
 - (a) Connect the connector.
 - (b) Install the A/C amplifier.

5. INSTALL LUGGAGE COMPARTMENT FRONT COVER
(See page BO-48)