


SLIP Indicator Light Circuit

CIRCUIT DESCRIPTION

The SLIP indicator blinks during TRC & VSC operation.

WIRING DIAGRAM

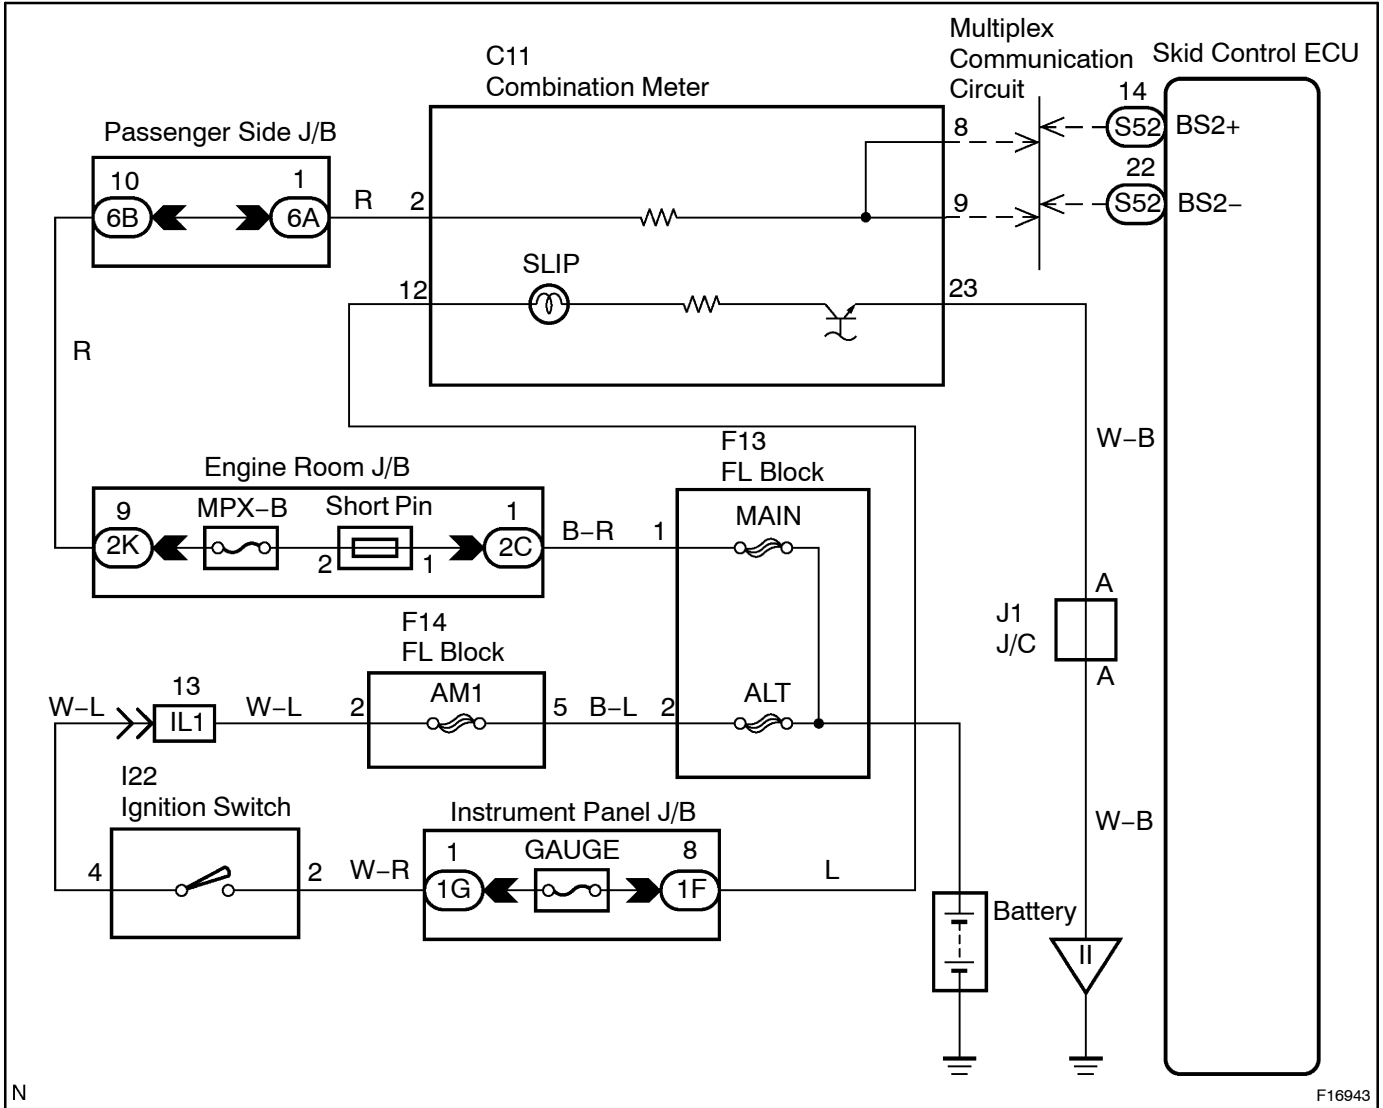

N

F16943

INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1	Check operation of the SLIP indicator light.
----------	---

PREPARATION:

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch to ON, and push the hand-held tester main switch to ON.
- (c) Select the ACTIVE TEST mode on the hand-held tester.

CHECK:

Check that "ON" and "OFF" of the SLIP indicator light can be shown on the combination meter by the hand-held tester.

OK	Go to step 3.
-----------	----------------------

NG

2	Check SLIP indicator light.
----------	------------------------------------

See combination meter troubleshooting.

NG	Repair or replace combination meter assembly.
-----------	--

OK

3	Check for open and short circuit in multiplex communication system between skid control ECU and combination meter (See page IN-31).
----------	--

NG	Repair or replace multiplex communication system.
-----------	--

OK

Check and replace skid control ECU.
--