



## REMOVAL


1. REMOVE FRONT WHEEL
2. REMOVE ENGINE ROOM SIDE COVER
3. REMOVE BRAKE ACTUATOR ASSEMBLY
  - (a) Disconnect the connectors and brake hose from the brake actuator assembly.

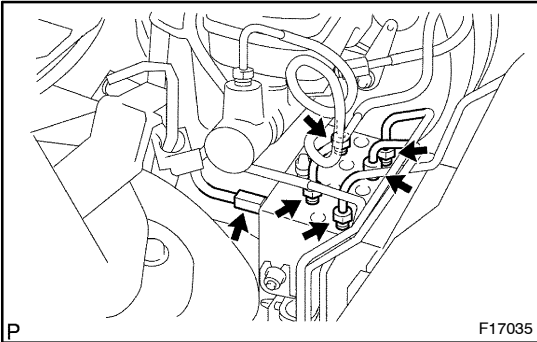

- (b) Disconnect the brake lines.
  - (1) Using SST, disconnect the 6 brake lines from the brake actuator assembly.  
SST 09751-36011  
**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

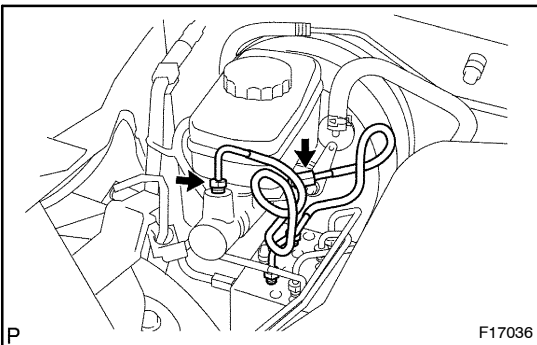

- (2) Using SST, disconnect the 2 brake lines from the brake master cylinder.  
SST 09751-36011  
**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

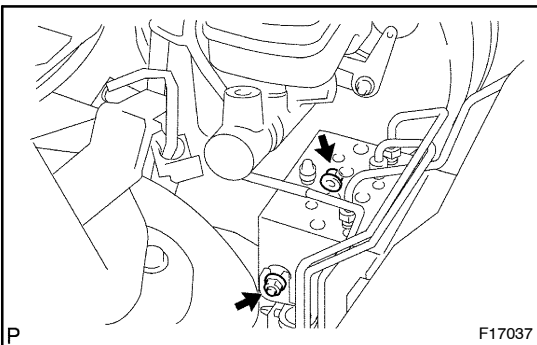

- (c) Remove the 2 nuts and brake actuator from bracket.  
**Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)**
- (d) Remove the 3 nuts and brake actuator bracket.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**