


TERMINALS OF ECU

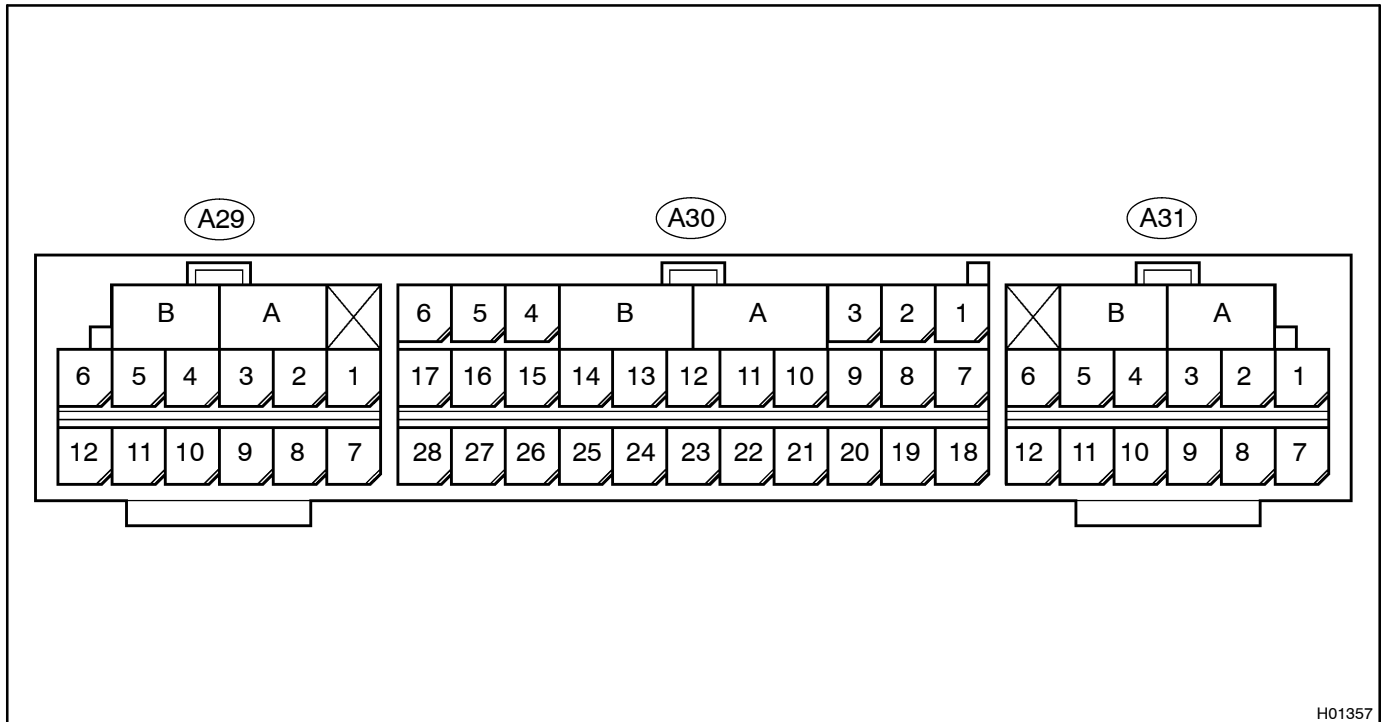

H01357

No.	Symbol	Terminal Name
A	-	Electrical Connector Check Mechanism
B	-	Electrical Connector Check Mechanism
A29 - 1	PL-	Squib (Seat Belt Pretensioner, LH)
A29 - 2	PL+	Squib (Seat Belt Pretensioner, LH)
A29 - 3	RL-	Squib (Rear Side, LH)
A29 - 4	RL+	Squib (Rear Side, LH)
A29 - 5	FL+	Squib (Front Side, LH)
A29 - 6	FL-	Squib (Front Side, LH)
A29 - 7	VUPL	Side Airbag Sensor (LH)
A29 - 9	SSL+	Side Airbag Sensor (LH)
A29 - 10	FSL	Side Airbag Sensor (LH)
A29 - 12	ESL	Side Airbag Sensor (LH)
A30 - 3	LA	SRS Warning Light
A30 - 5	IG2	Power Source (IGN Fuse)
A30 - 6	ACC	Power Source (CIG Fuse)
A30 - 10	P+	Squib (Passenger)
A30 - 11	P-	Squib (Passenger)
A30 - 12	SIL	Diagnosis
A30 - 13	D-	Squib (Driver)
A30 - 14	D+	Squib (Driver)
A30 - 19	Tc	Diagnosis
A30 - 27	E1	Ground
A30 - 28	E2	Ground
A31 - 1	FR-	Squib (Front Side, RH)
A31 - 2	FR+	Squib (Front Side, RH)

No.	Symbol	Terminal Name
A31 - 3	RR+	Squib (Rear Side, RH)
A31 - 4	RR-	Squib (Rear Side, RH)
A31 - 5	PR+	Squib (Pretensioner, RH)
A31 - 6	PR-	Squib (Pretensioner, RH)
A31 - 7	ESR	Side Airbag Sensor (RH)
A31 - 9	FSR	Side Airbag Sensor (RH)
A31 - 10	SSR+	Side Airbag Sensor (RH)
A31 - 12	VUPR	Side Airbag Sensor (RH)