


## REMOVAL


### 1. REMOVE REAR WHEEL

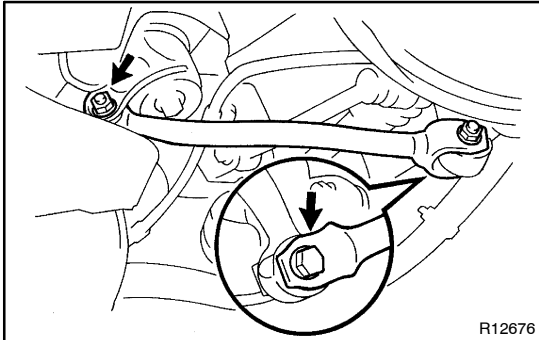

R12676

### 2. REMOVE STRUT ROD


- (a) Loosen the bolt and remove the nut and bolt, and then disconnect the strut rod from the rear axle carrier.
- (b) Remove the nut, washer, bolt and strut rod from the body.

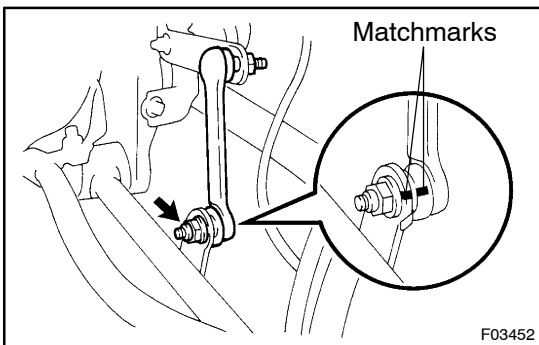

F03452


### 3. REMOVE NO. 1 LOWER SUSPENSION ARM

- (a) Place matchmarks on the height control sensor link and bracket.
- (b) Remove the nut and disconnect the sensor link.

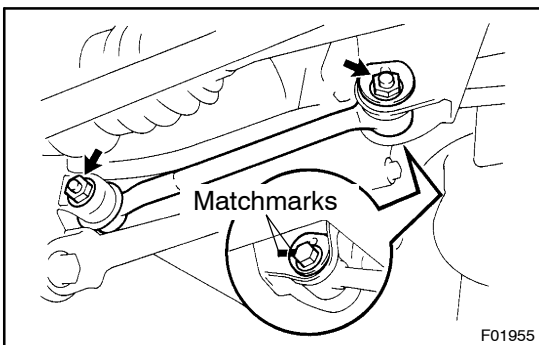

F01955

- (c) Place matchmarks on the cam bolt and body.
- (d) Remove the nut, cam plate and cam bolt.
- (e) Remove the rear axle carrier side set nut.

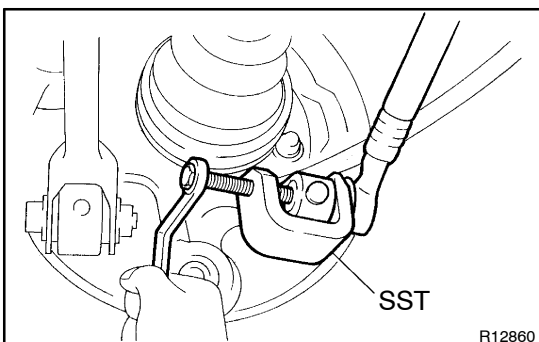

R12860

- (f) Using SST, remove the No. 1 lower suspension arm.  
SST 09628-10011


### 4. REMOVE NO. 2 LOWER SUSPENSION ARM

- (a) Disconnect the stabilizer bar link from the No. 2 lower suspension arm.

#### HINT:

If the ball joint turns together with the nut, use a hexagon (6 mm) wrench to hold the stud.

## SUSPENSION AND AXLE - REAR LOWER SUSPENSION ARM AND STRUT ROD

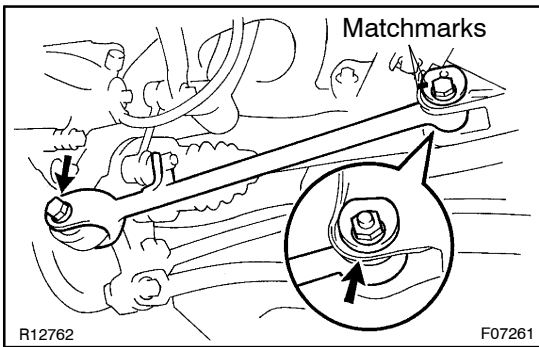

- (b) Place matchmarks on the cam bolt and body.
- (c) Remove the nut, cam plate and cam bolt.
- (d) Loosen the bolt and remove the nut, bolt and No. 2 lower suspension arm.