

## INSPECTION

1. INSPECT AIR INLET SERVOMOTOR CIRCUIT (See page DI-816)
2. INSPECT AIR INLET DAMPER POSITION SENSOR CIRCUIT (See page DI-807)