


Power Seat Control Switch Circuit

WIRING DIAGRAM

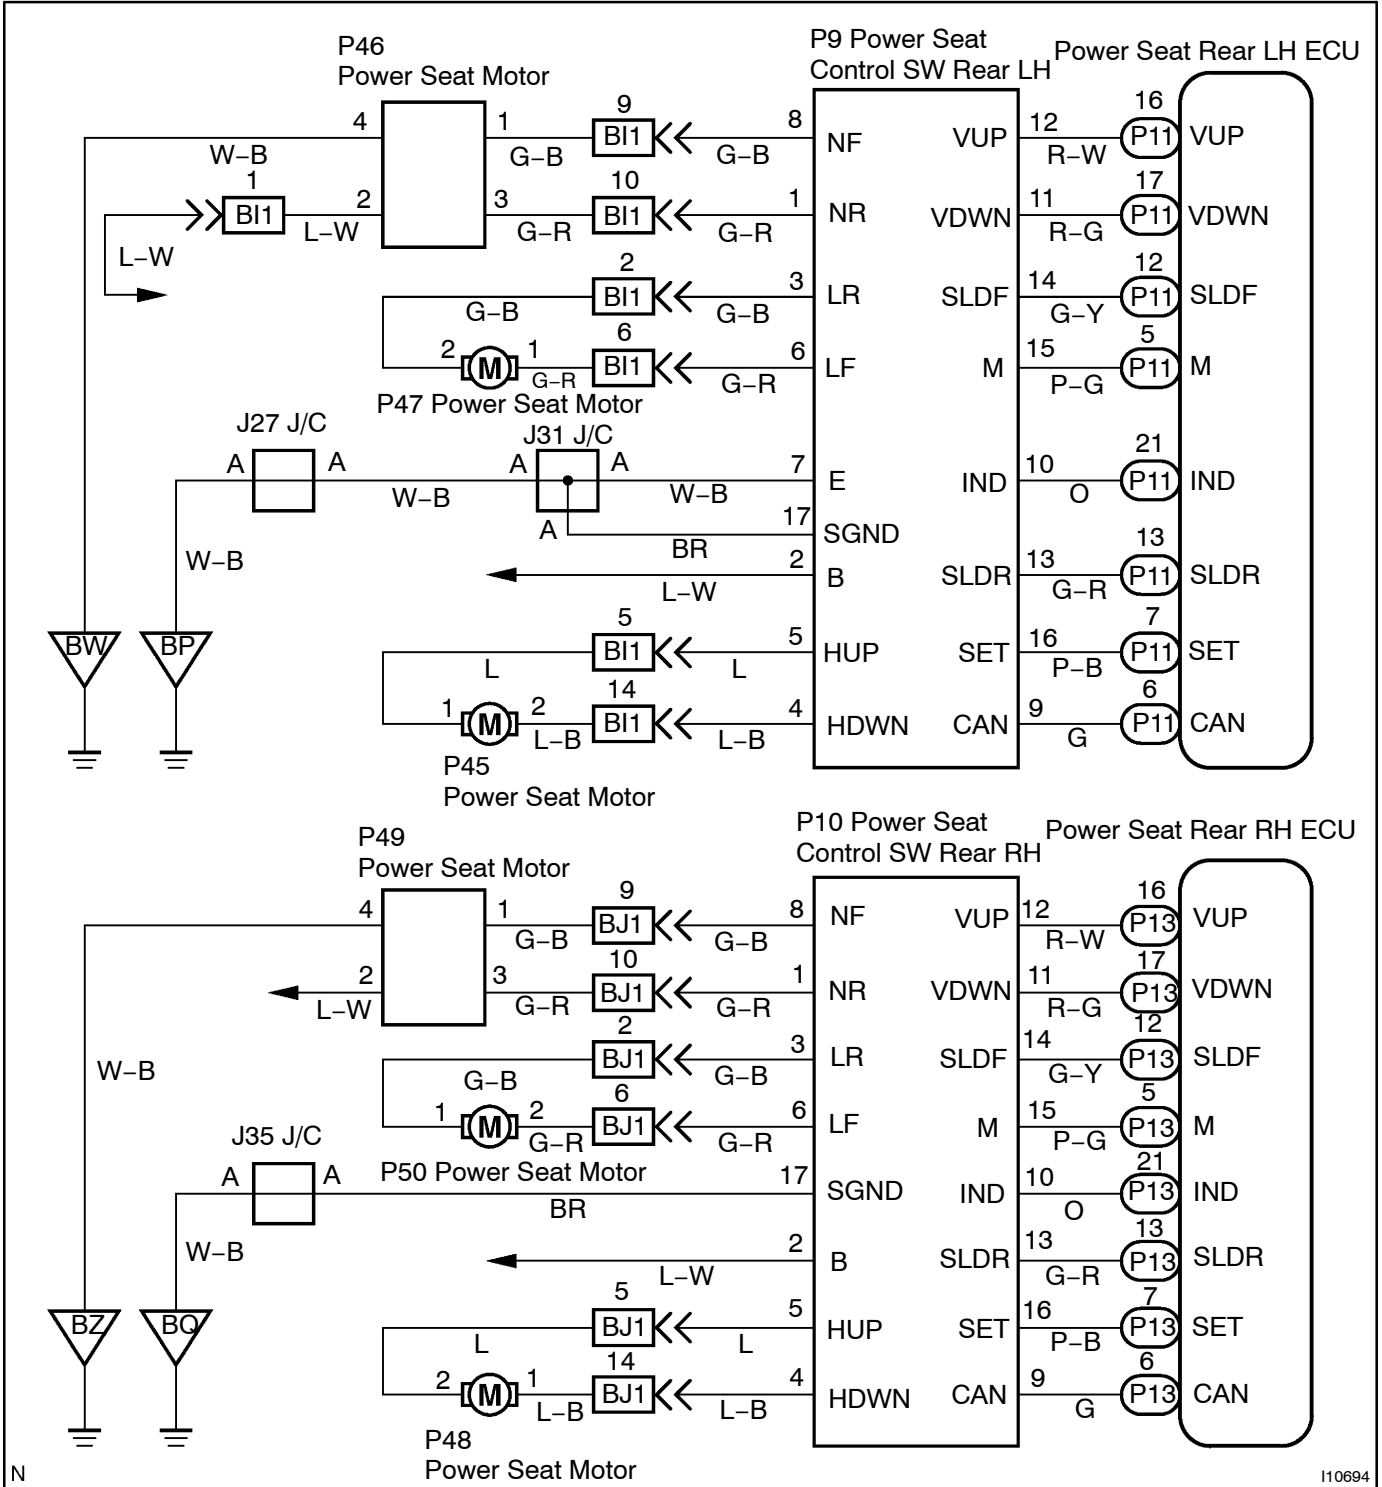

INSPECTION PROCEDURE

1 Check rear power seat control switch (See page BE-121).

NG

Replace rear power seat control switch.

OK

2 Check harness and connectors between rear power seat ECU and rear power seat control switch (See page BE-121).

NG

Repair and replace harness or connector.

OK

Check and replace rear power seat ECU (See page N-30).