



INSTALLATION

1. INSTALL FUEL PUMP ASSEMBLY AND FUEL PUMP SET PLATE

- (a) Install the fuel pump assembly and set plate with a new gasket, and connect the fuel hose to the fuel pump bracket.

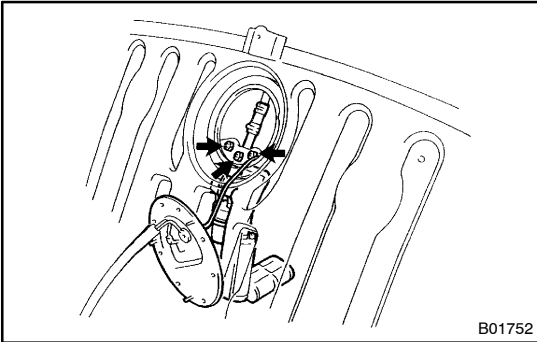

- (b) Connect the fuel pump bracket with 3 nuts to the fuel tank.
Torque: 5.5 N·m (56 kgf·cm, 48 in·lbf)

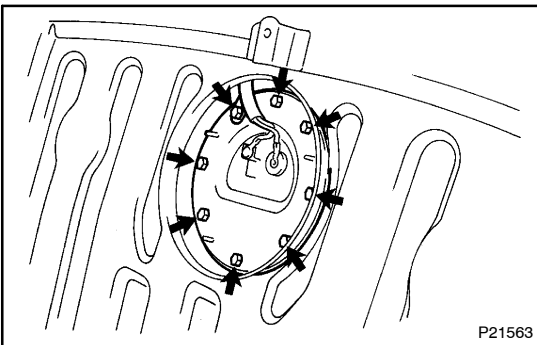

- (c) Connect the fuel pump set plate with 8 bolts to the fuel tank.

2. INSTALL PARTITION COVER

3. CONNECT FUEL PUMP CONNECTOR

4. INSTALL SEAT CUSHION AND BACK

5. INSTALL LUGGAGE COMPARTMENT TRIM COVER AND FLOOR MAT