

BE14T-01

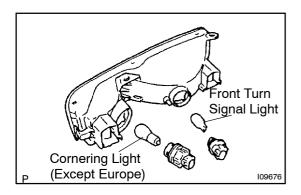


REPLACEMENT

- 1. REMOVE BULB
- (a) Remove engine under cover.
- (b) Remove 4 fender liner.
- (c) Remove the bulb socket and then the bulb.

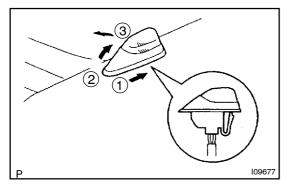


2. REMOVE FENDER MARKER ASSEMBLY

- (a) Remove head light assembly (refer to head light assembly)
- (b) Disconnect the connector.
- (c) Remove the fender marker assembly by pulling it as shown.

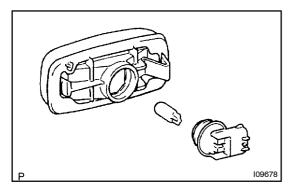

3. REMOVE SIDE TURN SIGNAL LIGHT BULB

- (a) Pull towards the front of the vehicle and disconnect the pin.
- (b) Remove the bulb socket and then the bulb.

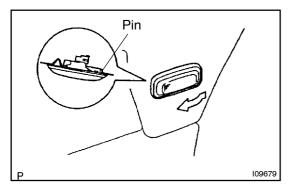

4. REMOVE SIDE TURN SIGNAL LIGHT ASSEMBLY

- (a) Pull towards the front of the vehicle and disconnect the pin.
- (b) Disconnect the connector and remove the side turn signal light assembly.