DI0BH-04

PROBLEM SYMPTOMS TABLE

NOTICE:

When replacing ABS & TRC ECU or sensor etc., turn the ignition switch OFF.

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Suspect Area	See page
ABS does not operate	Only when 1. to 4. are all normal and the problem is still occurring, replace the ABS & TRC ECU.	
	 Check the DTC reconfirming that the normal code is output. 	DI-153
	2. IG power source circuit	DI-180
	3. Speed sensor circuit	DI-175
	4. Check the hydraulic circuit for leakage.	DI-198
ABS does not operate efficiently	Only when 1. to 4. are all normal and the problem is still occurring, replace the ABS & TRC ECU.	
	Check the DTC reconfirming that the normal code is output.	DI-153
	2. Speed sensor circuit	DI-175
	3. Stop light switch circuit	DI-183
	4. Check the hydraulic circuit for leakage.	DI-198
ABS warning light abnormal	ABS warning light circuit	DI-190
	2. ABS & TRC ECU	DI-187
DTC check cannot be done	Only when 1. and 2. are all normal and the problem is still occurring, replace the ABS & TRC ECU.	
	1. ABS warning light circuit	DI-190
	2. Tc terminal circuit	DI-194
Speed sensor signal check cannot be done	1. Ts terminal circuit	DI-196
	2. ABS & TRC ECU	DI-187