


CIRCUIT INSPECTION

DTC	B1300/56	Water Temp. (For Electronically Controlled Hydraulic Cooling Fan) Circuit Malfunction
------------	-----------------	--

CIRCUIT DESCRIPTION

DTC No.	Detection Item	Trouble Area
B1300/56	When the ignition switch is ON, water temp. sensor circuit in open or short for 1 sec. or more.	<ul style="list-style-type: none"> • Water temp. sensor • RH bank engine ECU

WIRING DIAGRAM

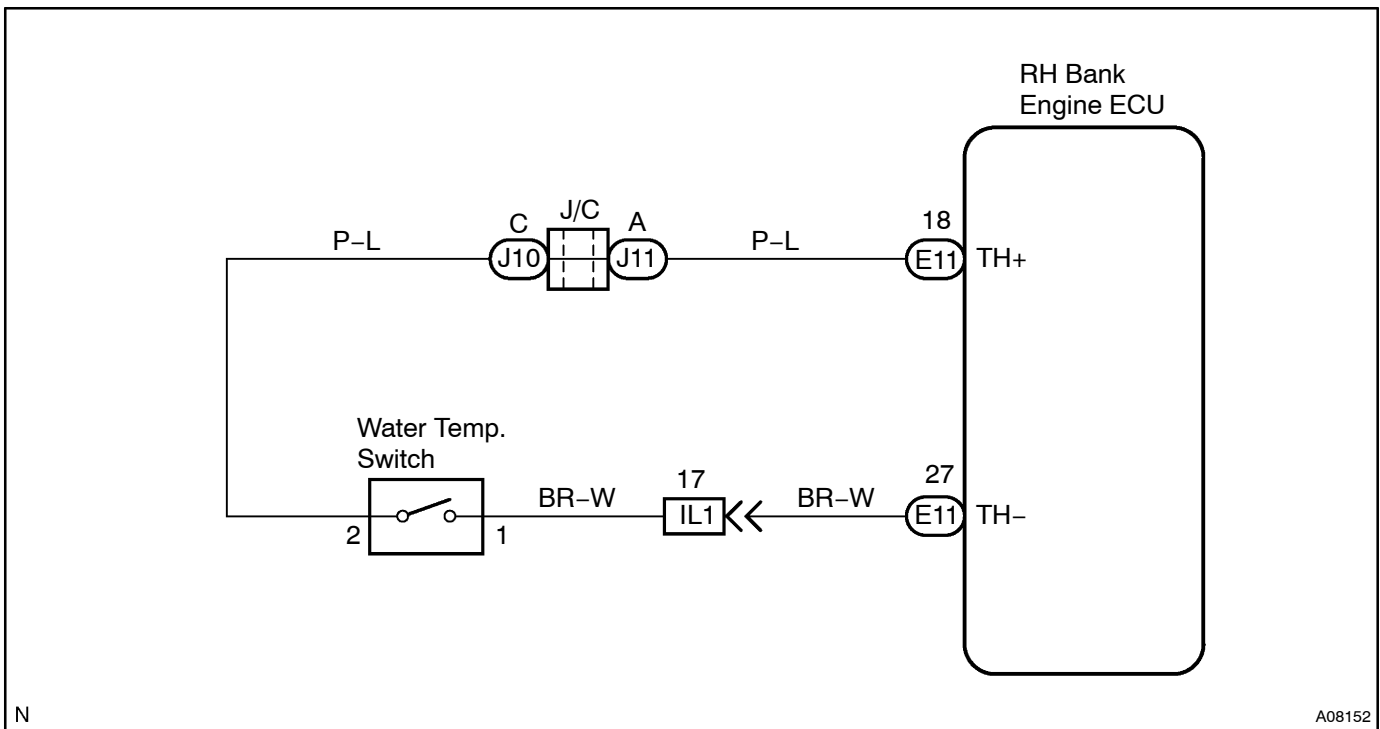

N

A08152

INSPECTION PROCEDURE

1 Check water temperature sensor (See page CO-41).

NG

Replace water temperature sensor.

OK

2 Check for open and short in harness and connector between water temperature sensor and RH engine ECU.

NG

Repair or replace harness or connector.

OK

Check and replace RH bank engine ECU (See page IN-20).