



HEATER MAIN RELAY INSPECTION

AC24W-01

1. REMOVE HEATER MAIN RELAY FROM JUNCTION BLOCK NO. 2
2. INSPECT HEATER MAIN RELAY CONTINUITY
(See [page DI-841](#))