

## PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
*Rear J/B ECU control system does not operate. (All)	<ol style="list-style-type: none"> <li>1. Power source circuit</li> <li>2. Ignition switch power source circuit</li> <li>3. TENR terminal circuit</li> <li>4. Rear J/B ECU</li> </ol>	<a href="#">DI-666</a> <a href="#">DI-668</a> <a href="#">DI-683</a> <a href="#">IN-30</a>
Rear A/C system does not operate.	<ol style="list-style-type: none"> <li>1. Rear A/C amplifier circuit</li> <li>2. A/C system</li> <li>3. Rear J/B ECU</li> </ol>	<a href="#">DI-673</a> <a href="#">DI-766</a> <a href="#">IN-30</a>
Rear power seat control system does not operate.	<ol style="list-style-type: none"> <li>1. Rear power seat ECU communication circuit</li> <li>2. Rear power seat system</li> <li>3. Rear J/B ECU</li> </ol>	<a href="#">DI-679</a> <a href="#">DI-380</a> <a href="#">IN-30</a>
Power outlet system does not operate.	<ol style="list-style-type: none"> <li>1. Power outlet circuit</li> <li>2. Rear J/B ECU</li> </ol>	<a href="#">DI-681</a> <a href="#">IN-30</a>
Fuel lid opener system does not operate.	<ol style="list-style-type: none"> <li>1. Fuel lid opener solenoid circuit</li> <li>2. Body control system</li> <li>3. Rear J/B ECU</li> </ol>	<a href="#">DI-675</a> <a href="#">DI-480</a> <a href="#">IN-30</a>
Luggage compartment door opener system does not operate.	<ol style="list-style-type: none"> <li>1. Luggage compartment door courtesy switch circuit</li> <li>2. Luggage compartment door opener motor circuit</li> <li>3. Body control system</li> <li>4. Rear J/B ECU</li> </ol>	<a href="#">DI-670</a> <a href="#">DI-672</a> <a href="#">DI-480</a> <a href="#">IN-30</a>
Luggage compartment closer system does not operate.	<ol style="list-style-type: none"> <li>1. Luggage compartment door courtesy switch circuit</li> <li>2. Luggage compartment door opener motor circuit</li> <li>3. Body control system</li> <li>4. Rear J/B ECU</li> </ol>	<a href="#">DI-670</a> <a href="#">DI-672</a> <a href="#">DI-480</a> <a href="#">IN-30</a>
Cellular mobile telephone does not operate.	<ol style="list-style-type: none"> <li>1. Telephone transceiver and speaker relay circuit</li> <li>2. Cellular mobile telephone each parts</li> <li>3. Rear J/B ECU</li> </ol>	<a href="#">DI-677</a> - <a href="#">IN-30</a>
Rear radio and player system does not operate.	<ol style="list-style-type: none"> <li>1. Microphone amplifier circuit</li> <li>2. Audio system</li> <li>3. Rear J/B ECU</li> </ol>	<a href="#">DI-685</a> <a href="#">BE-2</a> <a href="#">IN-30</a>
Fuel sender gauge does not operate.	<ol style="list-style-type: none"> <li>1. Fuel sender gauge circuit</li> <li>2. Combination meter system</li> <li>3. Rear J/B ECU</li> </ol>	<a href="#">DI-676</a> <a href="#">BE-2</a> <a href="#">IN-30</a>

\*: Rear J/B ECU control systems: Rear A/C system, Rear power seat system, Power outlet system, Fuel lid opener system, Luggage compartment door opener system, Luggage compartment closer system, Cellular mobile phone system and rear radio and player system