


Alternator circuit

CIRCUIT DESCRIPTION

When the ignition switch is turned ON, voltage will be generated from the L terminal of the Body ECU. However, if the ignition switch is turned to START (start the engine), the alternator will generate voltage, making the L Terminal of the Body ECU unable to generate voltage.

WIRING DIAGRAM

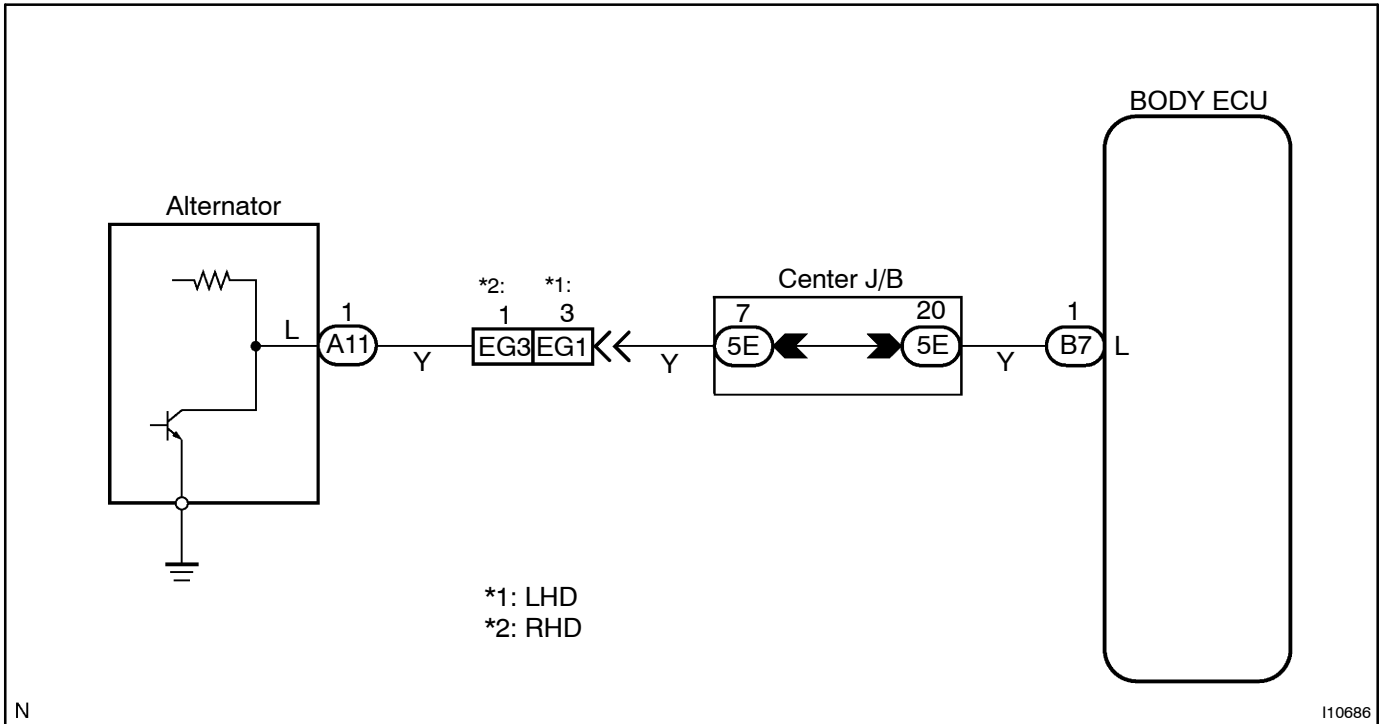

N

I10686

INSPECTION PROCEDURE**1 Check alternator.****NG****Replace the alternator.****OK****2 Check wireharness and connector between alternator and Body ECU (See page IN-30).****NG****Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on problem symptoms table (See page DI-488).**