

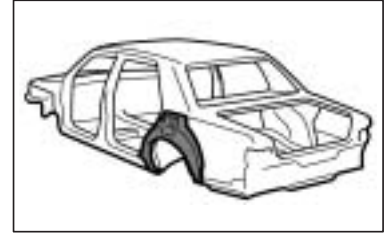


QUARTER WHEEL HOUSING OUTER PANEL (ASSY)

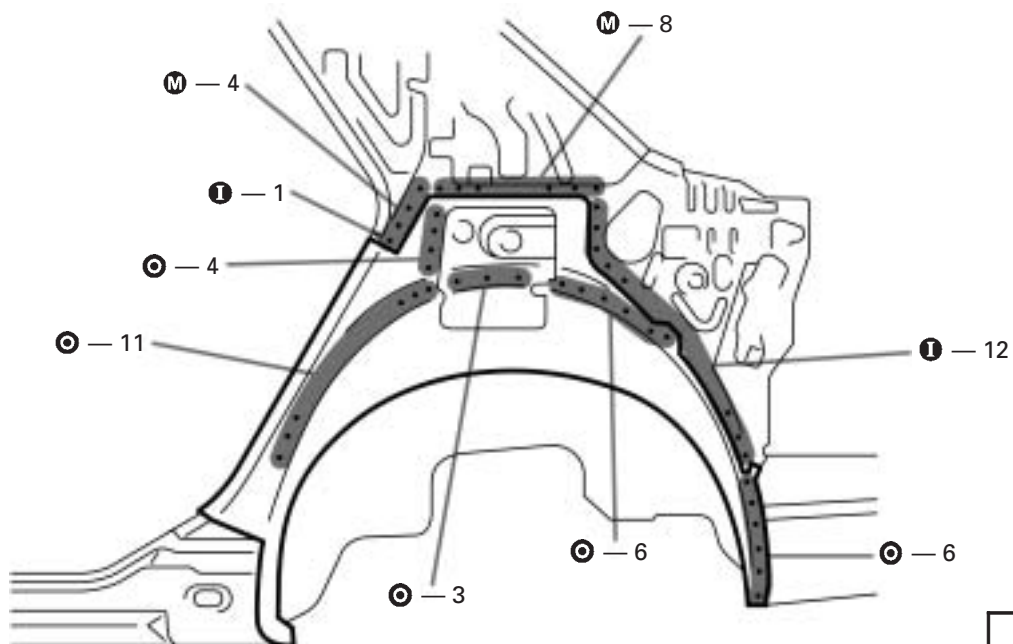


REMOVAL (With the quarter panel removed.)

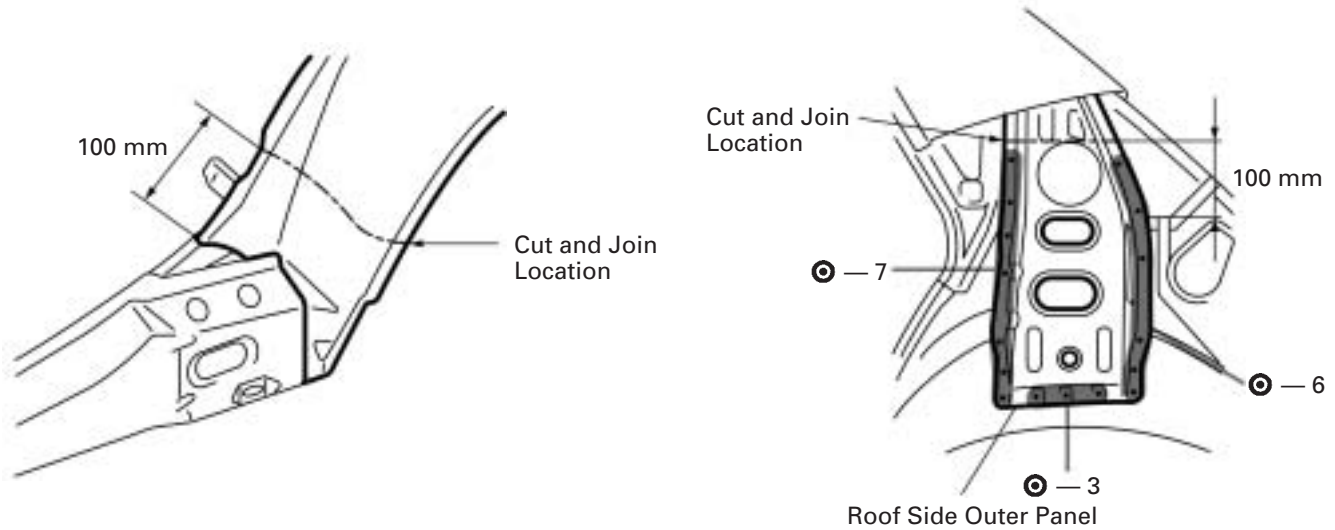

mm	in.
100	3.94

1. Cut and join the parts at the locations as shown above.
2. After removing the roof side outer panel, replace the quarter wheel housing outer panel.

INSTALLATION

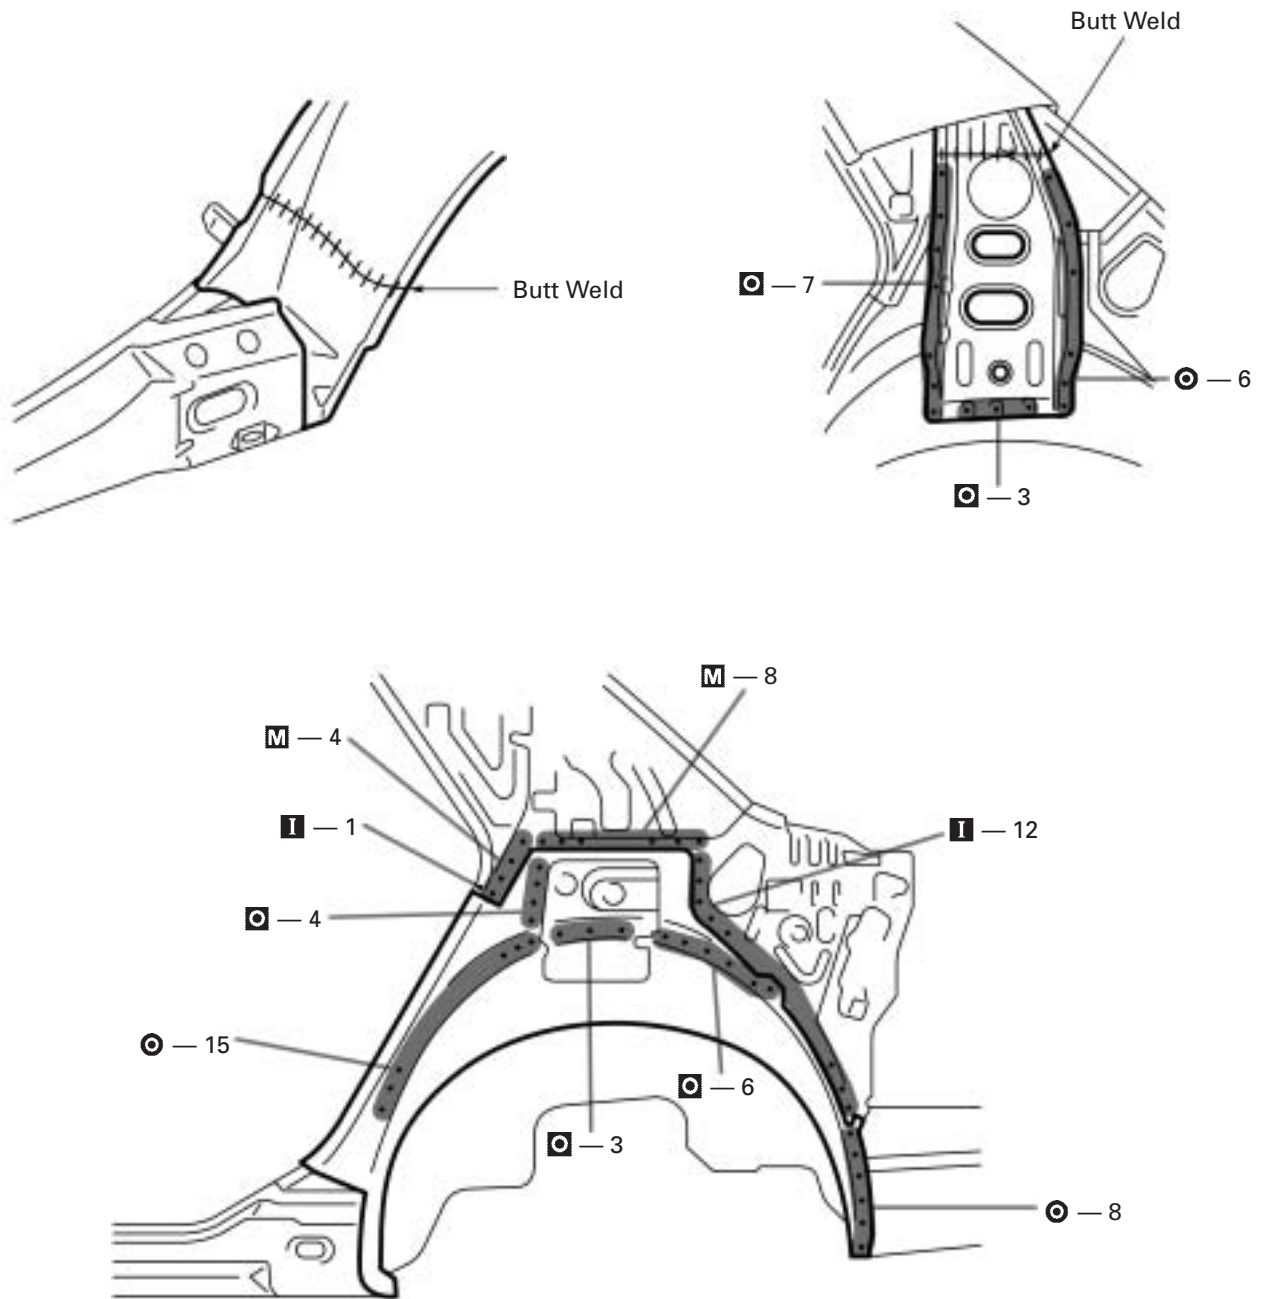

1. Before welding the new parts, temporarily install the quarter panel and check the fit.