


Indicator Light Circuit

CIRCUIT DESCRIPTION


When the engine immobiliser system is preparing to set, this circuit light up the indicator light. When the system has been set, it continually turns the indicator light on for 1 second and turns it off for 1 seconds, thus blinking the indicator light.

WIRING DIAGRAM

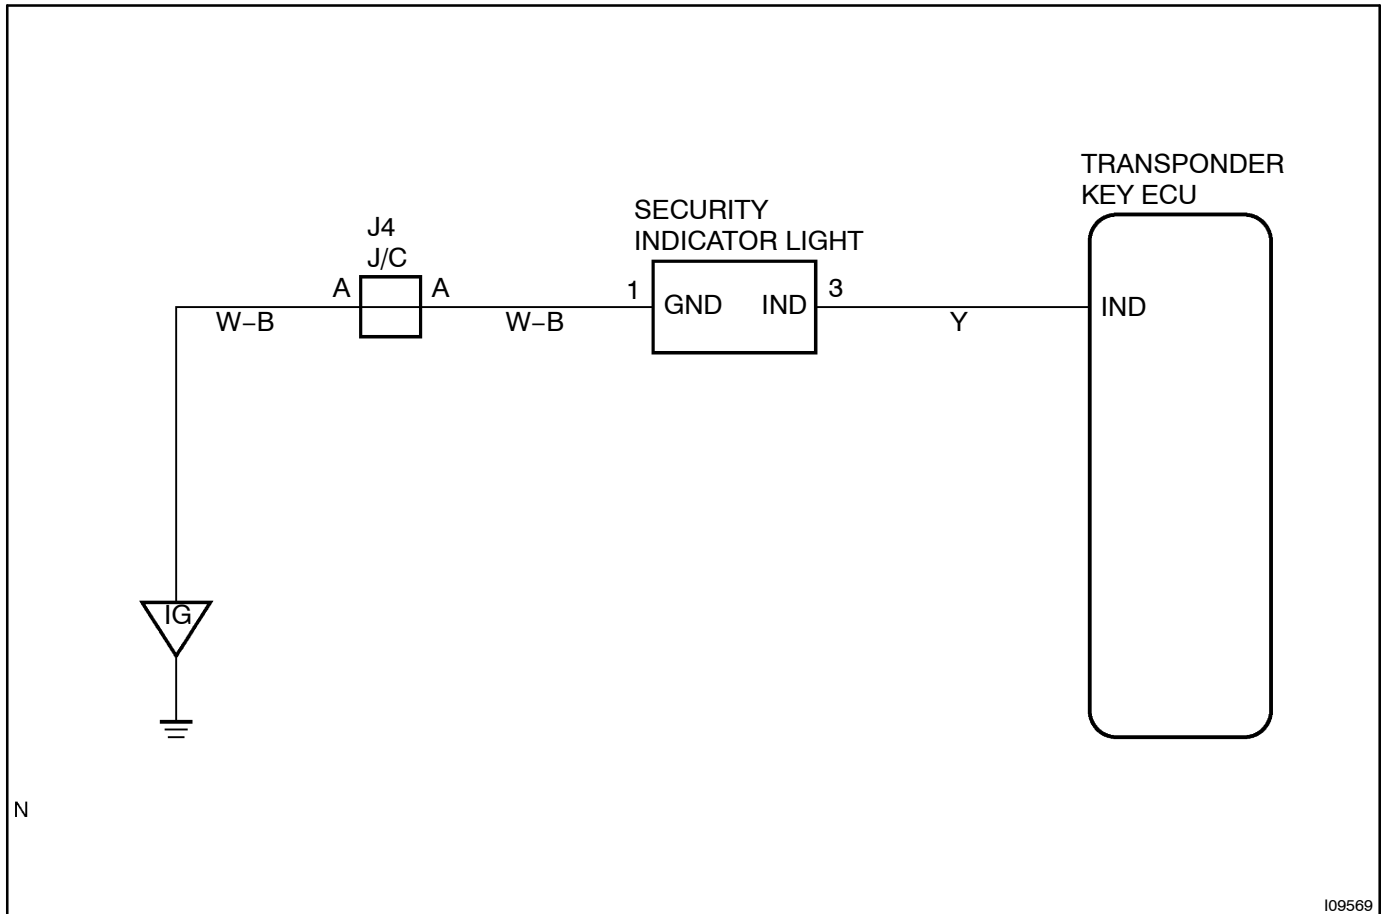

INSPECTION PROCEDURE

1 Check indicator light.

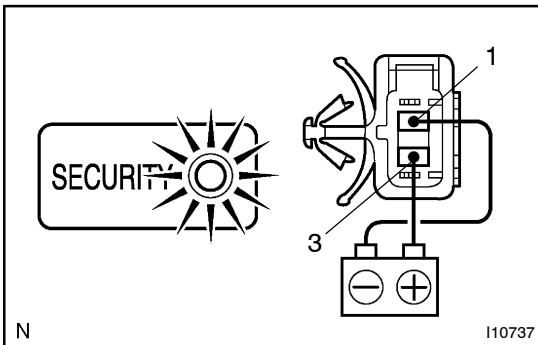**PREPARATION:**

- (a) Remove indicator light.
- (b) Disconnect indicator light connector.

CHECK:

Connect positive \oplus lead to terminal 3 and negative \ominus lead to terminal 1 of indicator light connector.

OK:

Indicator light comes on.

NG

Replace indicator light.

OK

2 Check harness and connector between ECU and indicator light, indicator light and body ground (See page IN-30).

NG

Repair or replace harness or connector.

OK

Check and replace ECU (See page IN-30).