

PROBLEM SYMPTOMS TABLE

Perform troubleshooting of the circuits for the applicable problem symptom in the order given in the chart below. Proceed to the page number given for each circuit.

HINT:

- If the instruction "Proceed to next circuit inspection shown on the chart" is given in the flow chart for each circuit, proceed to the circuit with the next highest number in the table to continue the check.
- If the trouble still reappears even though there are no abnormalities in any of the other circuits, then check and replace Tilt & Telescopic ECU as the last step.

Symptom	Suspect Area	See page
Both Tilt and Telescopic functions do not operate	1. ECU power source circuit 2. Actuator power source circuit 3. Key unlock warning switch circuit 4. Sensor power source circuit 5. Tilt and Telescopic manual switch circuit 6. Tilt & Telescopic ECU	DI-204 DI-206 DI-225 DI-208 DI-218 IN-30
Only Tilt function does not operate	1. Tilt and Telescopic manual switch circuit 2. Tilt position sensor circuit 3. Tilt motor circuit 4. Tilt & Telescopic ECU	DI-218 DI-210 DI-212 IN-30
Only Telescopic function does not operate	1. Tilt and Telescopic manual switch circuit 2. Telescopic position sensor circuit 3. Telescopic motor circuit 4. Tilt & telescopic ECU	DI-218 DI-214 DI-216 IN-30