


Back-up light circuit

CIRCUIT DESCRIPTION

Receiving the back-up light switch signal from either of the rear light LH ECU, the rear light RH ECU will make the back-up light come on.

WIRING DIAGRAM

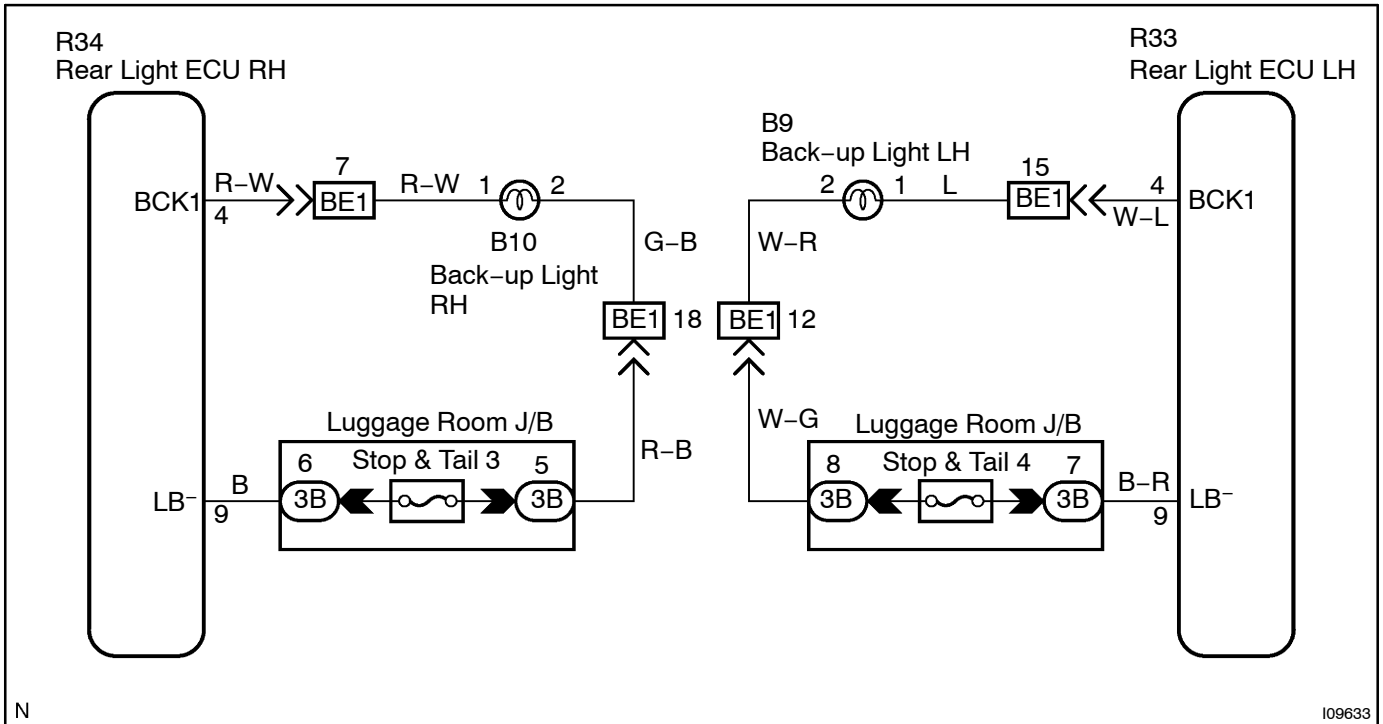

N

109633

INSPECTION PROCEDURE

1 Check back-up light (See page BE-2).

NG

Replace the failure light.

OK

2 Check wireharness and connector between each back-up light and rear light ECU, battery and each back-up light (See page N-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-693).