



## VEHICLE SPEED SENSOR ON-VEHICLE REPAIR

AT03X-03

1. **DISCONNECT VEHICLE SPEED SENSOR CONNECTOR**
2. **REMOVE VEHICLE SPEED SENSOR**
  - (a) Remove the bolt and vehicle speed sensor.
  - (b) Remove the O-ring from the vehicle speed sensor.
3. **INSTALL VEHICLE SPEED SENSOR**
  - (a) Coat a new O-ring with ATF and install it to the vehicle speed sensor.
  - (b) Install the vehicle speed sensor to the extension housing with the bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**
4. **CONNECT VEHICLE SPEED SENSOR CONNECTOR**