



TRANSMISSION CASE TRANSMISSION CASE INSPECTION

AT0EL-02

INSPECT TRANSMISSION CASE BUSHING

Using a cylinder gauge, measure the inside diameter of the transmission case rear bushing.

Maximum inside diameter:

38.18 mm (1.5031 in.)

If the inside diameter is greater than the maximum, replace the transmission case.

AT