


INSPECTION

1. INSPECT FRONT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	12 - 16	Continuity


If continuity is not as specified, replace the switch.

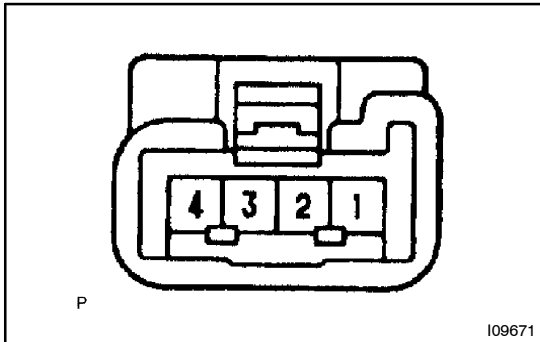

2. INSPECT REAR FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
ON	3 - 4	Continuity
Illumination circuit	1 - 2	Continuity

If continuity is not as specified, replace the switch.

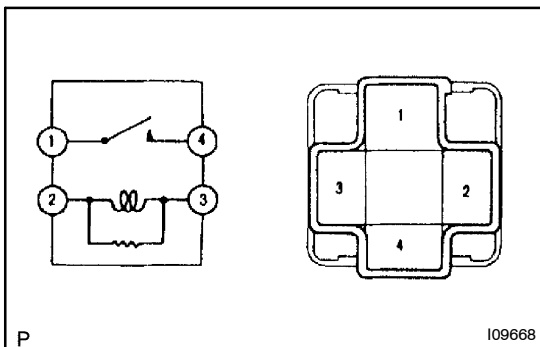

3. INSPECT FRONT FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 3	Continuity
Apply B+ between terminals 2 and 3.	1 - 4	Continuity

If continuity is not as specified, replace the relay.