


<b>DTC</b>	<b>B1243 / 43</b>	<b>GSW terminal circuit malfunction</b>
------------	-------------------	---

**CIRCUIT DESCRIPTION**

This DTC is output when open or GND short of GSW terminal is detected.

DTC No.	DTC Detection Condition	Trouble Area
B1243/43	Open or GND short of GSW terminal	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• Body ECU</li> <li>• Airbag sensor assembly</li> </ul>

**WIRING DIAGRAM**

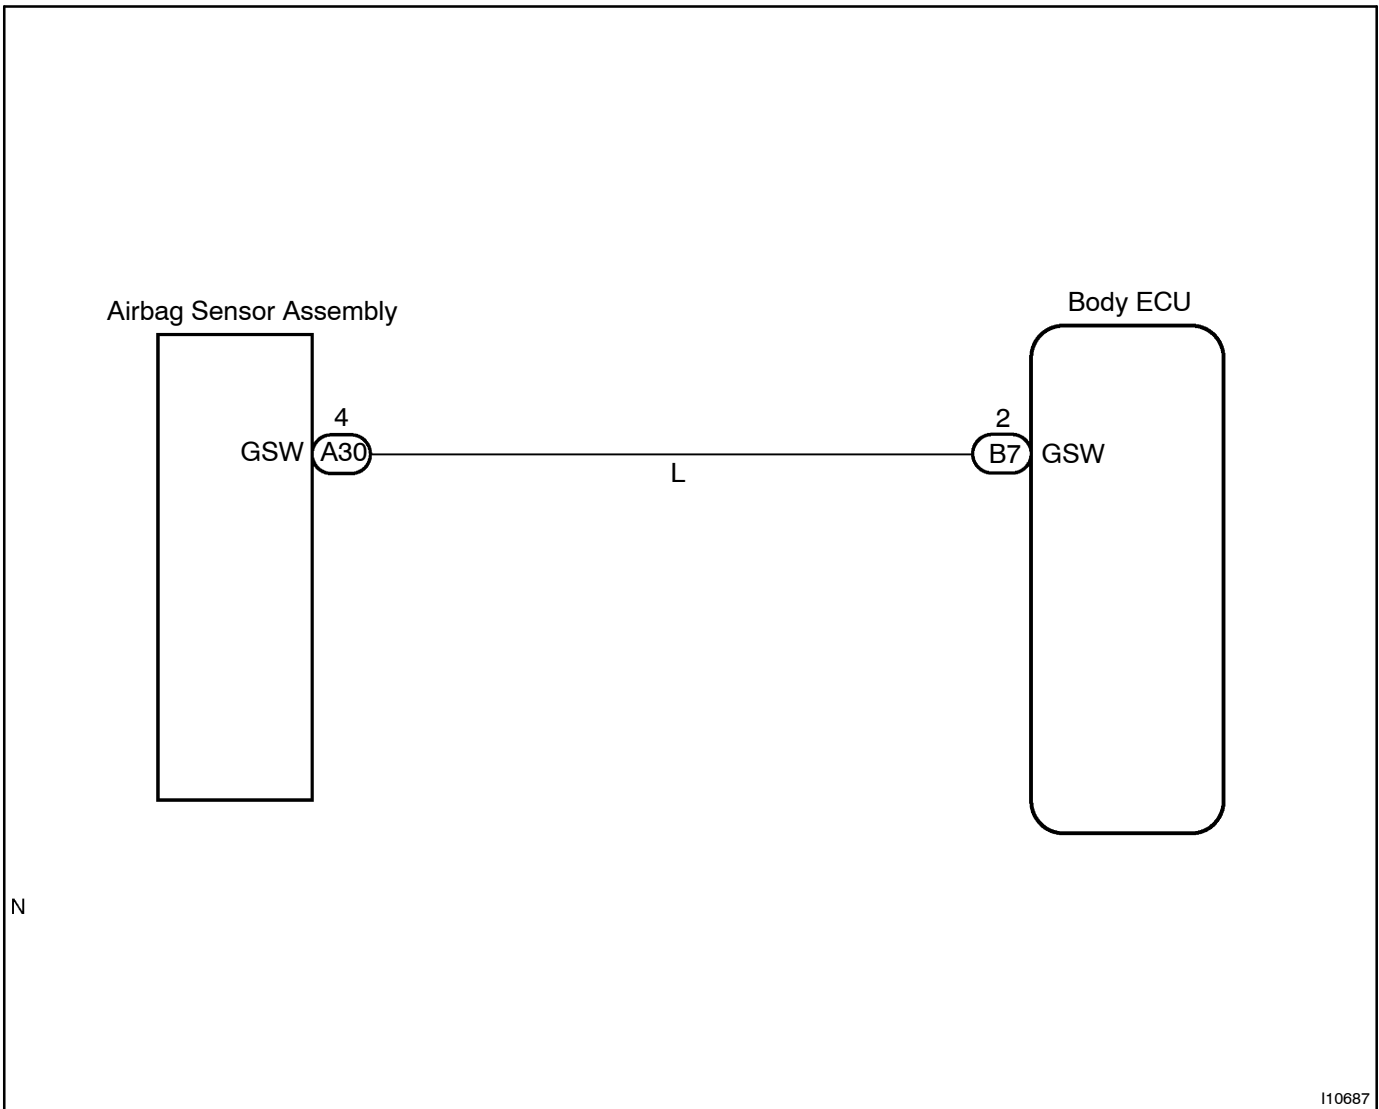

**INSPECTION PROCEDURE**

- |          |   |
|----------|---|
| <b>1</b> | <b>Check for open and short in wireharness and connector between body ECU and airbag sensor assembly.</b> |
|----------|---|

**NG****Repair or replace wireharness and connector.****OK**

- |          |                            |
|----------|----------------------------|
| <b>2</b> | <b>Check the body ECU.</b> |
|----------|----------------------------|

**CHECK:**

Check if DTC B1243/43 is output after replacing body ECU.

**OK:**

B1243/43 is not output.

**NG****Replace the airbag sensor assembly.****OK****Replace the body ECU.  
(Original body ECU is failure)**