


REMOVAL

1. DISCONNECT CONNECTOR

- (a) Remove the front fender moulding and fender liner.
- (b) Disconnect the speed sensor connector.

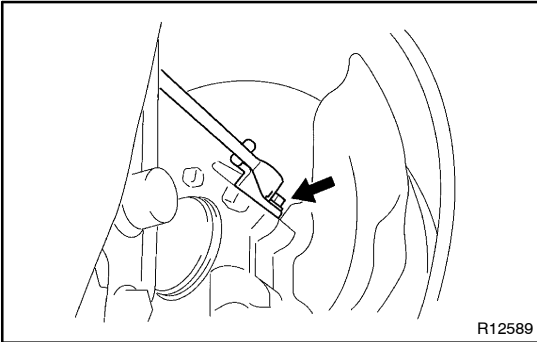

2. REMOVE SPEED SENSOR

- (a) Remove the 3 clamp bolts holding the sensor harness to the body and steering knuckle.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

- (b) Right wheel:

Disconnect the pad wear indicator connector from the speed sensor wire harness.

- (c) Remove the speed sensor from the steering knuckle.

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)