

INSTALLATION

1. INSTALL 2 BUSHINGS TO STABILIZER BAR

2. INSTALL STABILIZER BAR

Install the stabilizer bar, 2 stabilizer bar brackets and 4 bolts.

Torque: 18 N·m (180 kgf·cm, 13 ft·lbf)

3. INSTALL 2 STABILIZER BAR LINKS

Torque: 65 N·m (660 kgf·cm, 48 ft·lbf)

HINT:

If the ball joint turns together with the nut, use a 6 mm hexagon wrench to hold the stud.