
 


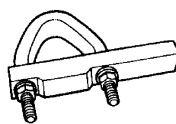 
 
 
 
 
 

 
 
 
 
 
 
 
 

 
 
 
 
 



 
 







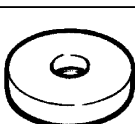 
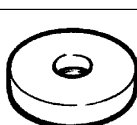 
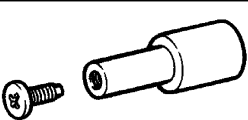 
STEERING**SST (Special Service Tools)**

PP22S-01

 



 
 
 
	09238-47012	Water Pump Bearing Remover & Replacer	PS vane pump
	09316-60011	Transmission & Transfer Bearing Replacer	PS vane pump
	(09316-00011)	Replacer Pipe	
	(09316-00071)	Replacer "F"	
	09612-00012	Rack & Pinion Steering Rack Housing Stand	PS gear
	09612-22011	Tilt Handle Bearing Replacer	PS gear
	09612-30012	Steering Worm Bearing Puller	PS gear
	09616-00010	Steering Worm Bearing Adjusting Socket	PS gear
	09631-10030	Oil Seal Remover	PS vane pump
	09631-12071	Steering Rack Oil Seal Test Tool	PS gear
	09631-20081	Seal Ring Tool	PS gear
	09631-20102	Steering Rack Cover "H"	PS gear

PREPARATION - STEERING

	09631-32020	Seal Ring Tool	PS gear
	09633-00020	Power Steering Hose Nut Wrench	PS gear
	09640-10010	Power Steering Pressure Gauge Set	Power steering fluid
	(09641-01010)	Gauge Assy	
	(09641-01030)	Attachment B	
	(09641-01040)	Attachment C	
	09910-00015	Puller Set	PS vane pump
	(09911-00011)	Puller Clamp	
	(09912-00010)	Puller Slide Hammer	
	09922-10010	Variable Open Wrench	PS gear
	09950-50012	Puller C Set	Power tilt and power telescopic steering column
	(09951-05010)	Hanger 150	
	(09952-05010)	Slide Arm	

	<p>(09953-05020) Center Bolt 150</p>	
	<p>(09954-05020) Claw No.2</p>	
	<p>09950-60010 Replacer Set</p>	
	<p>(09951-00180) Replacer 18</p>	<p>PS vane pump PS gear</p>
	<p>(09951-00240) Replacer 24</p>	<p>PS gear</p>
	<p>(09951-00280) Replacer 28</p>	<p>PS gear</p>
	<p>(09951-00300) Replacer 30</p>	<p>PS vane pump</p>
	<p>(09951-00310) Replacer 31</p>	<p>PS gear</p>
	<p>(09951-00340) Replacer 34</p>	<p>PS gear</p>
	<p>(09951-00400) Replacer 40</p>	<p>PS gear</p>
	<p>(09951-00430) Replacer 43</p>	<p>PS gear</p>
	<p>(09951-00460) Replacer 46</p>	<p>PS gear</p>
	<p>(09952-06010) Adapter</p>	<p>PS vane pump PS gear</p>

PREPARATION - STEERING

	<p>09950-70010 Handle Set</p>	
	<p>(09951-07100) Handle 100</p>	<p>PS vane pump PS gear</p>
	<p>(09951-07150) Handle 150</p>	<p>PS gear</p>
	<p>(09951-07360) Handle 360</p>	<p>PS gear</p>
	<p>09960-10010 Variable Pin Wrench Set</p>	<p>PS vane pump</p>
	<p>(09962-01000) Variable Pin Wrench Arm Assy</p>	
	<p>(09963-01000) Pin 10</p>	