

INSTALLATION

1. INSTALL FRONT HEIGHT CONTROL SENSOR AND ACCELERATION SENSOR

Install the front height control sensor and acceleration sensor with the 2 nuts.

Torque: 7.8 N·m (80 kgf·cm, 69 in·lbf)

2. CONNECT HEIGHT CONTROL SENSOR LINK

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

3. CONNECT CONNECTOR

4. INSTALL FRONT FENDER LINER

5. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

6. CHECK VEHICLE HEIGHT (See page SA-5)