


# Fuel lid opener switch circuit

## WIRING DIAGRAM

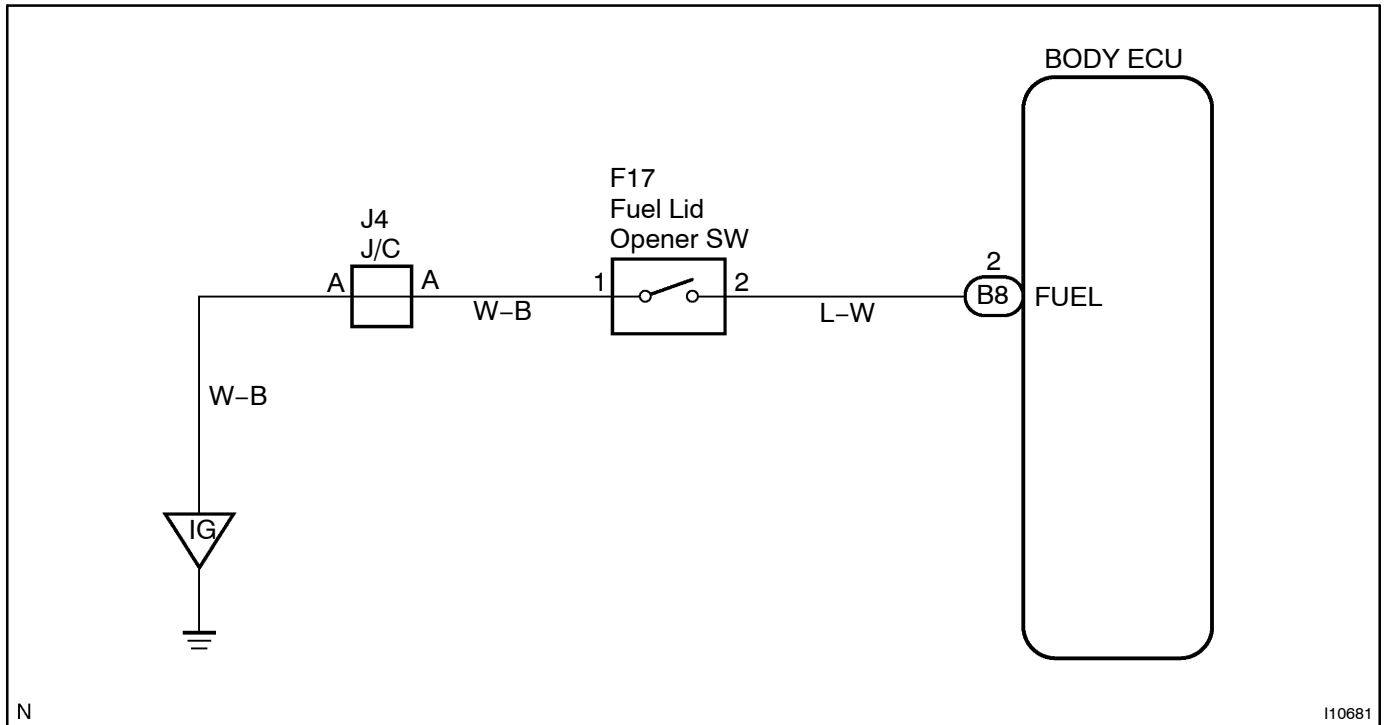

N

I10681

**INSPECTION PROCEDURE**

1 Check fuel lid opener switch (See page BE-151).

NG

Replace the fuel lid opener switch.

OK

2 Check wireharness and connector between fuel lid opener switch and Body ECU (See page IN-30).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-488).