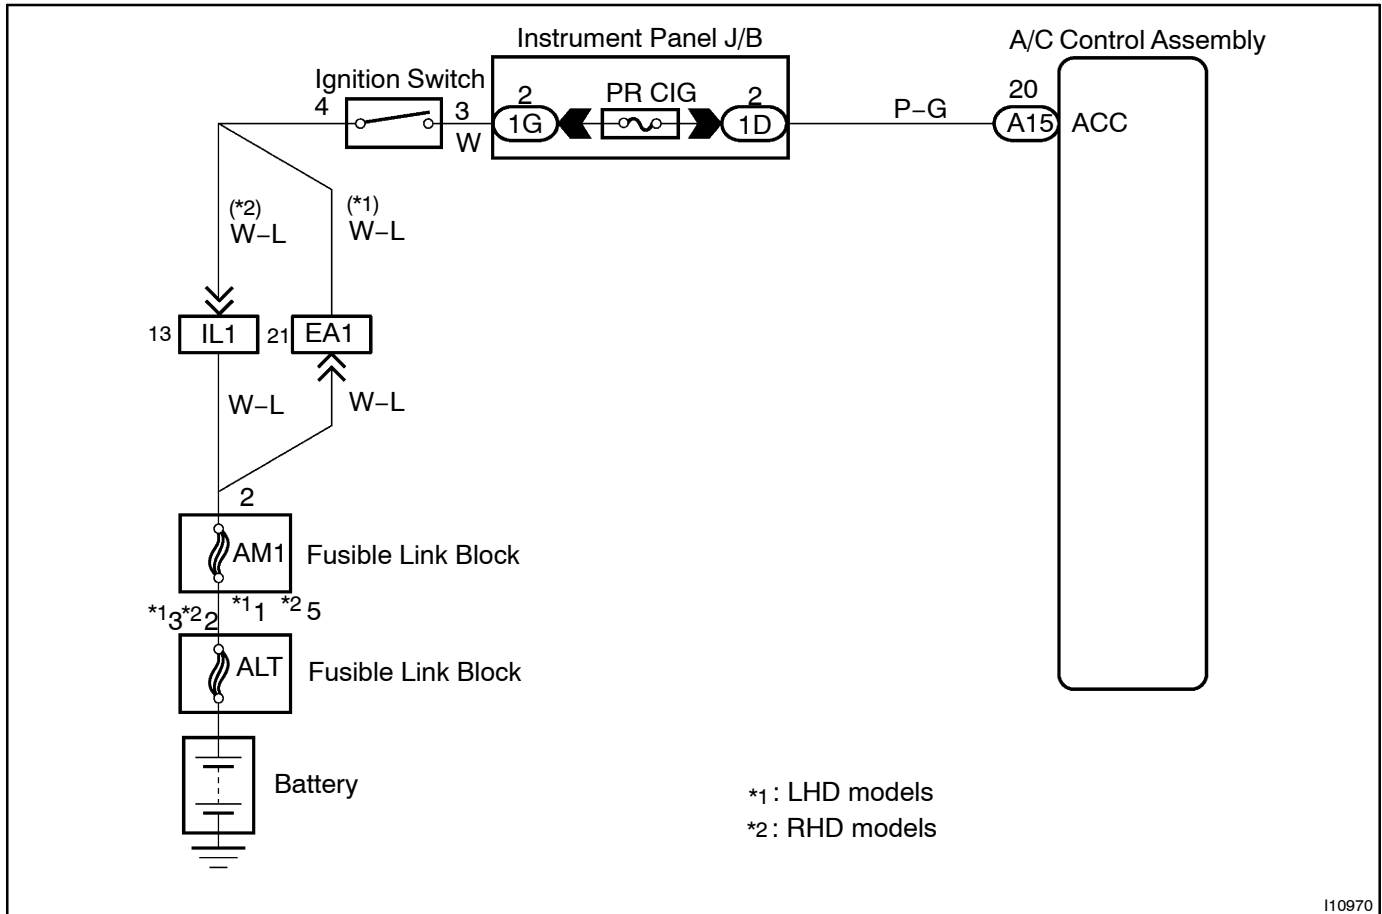


# ACC Power Source Circuit

## CIRCUIT DESCRIPTION

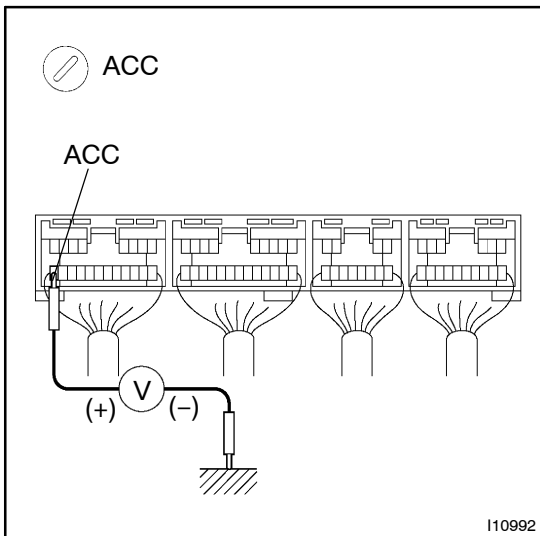
This circuit supplies power to the A/C control assembly.

## WIRING DIAGRAM



## INSPECTION PROCEDURE

- 1 Check voltage between terminal ACC of A/C control assembly connector and body ground.

**PREPARATION:**

Remove A/C control assembly with connector still connected.

**CHECK:**

- (a) Turn ignition switch to ACC.  
 (b) Measure voltage between terminal ACC of A/C control assembly connector and body ground.

**OK:**

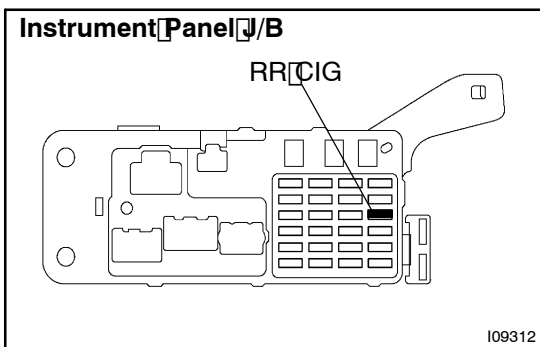
Voltage: Battery voltage

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-780).

NG

- 2 Check RADIO No.2 fuse.

**PREPARATION:**

Remove RR CIG fuse from Instrumental Panel J/B.

**CHECK:**

Check continuity of RR CIG fuse.

**OK:**

Continuity exists.

NG

Check for short in all the harness and components connected to the RR CIG fuse.

OK

Check and repair harness and connector between A/C control assembly and battery.