


## Engine and ECT ECU communication circuit

### CIRCUIT DESCRIPTION

When the immobiliser system is setting, a signal is sent to the ECU.

### WIRING DIAGRAM

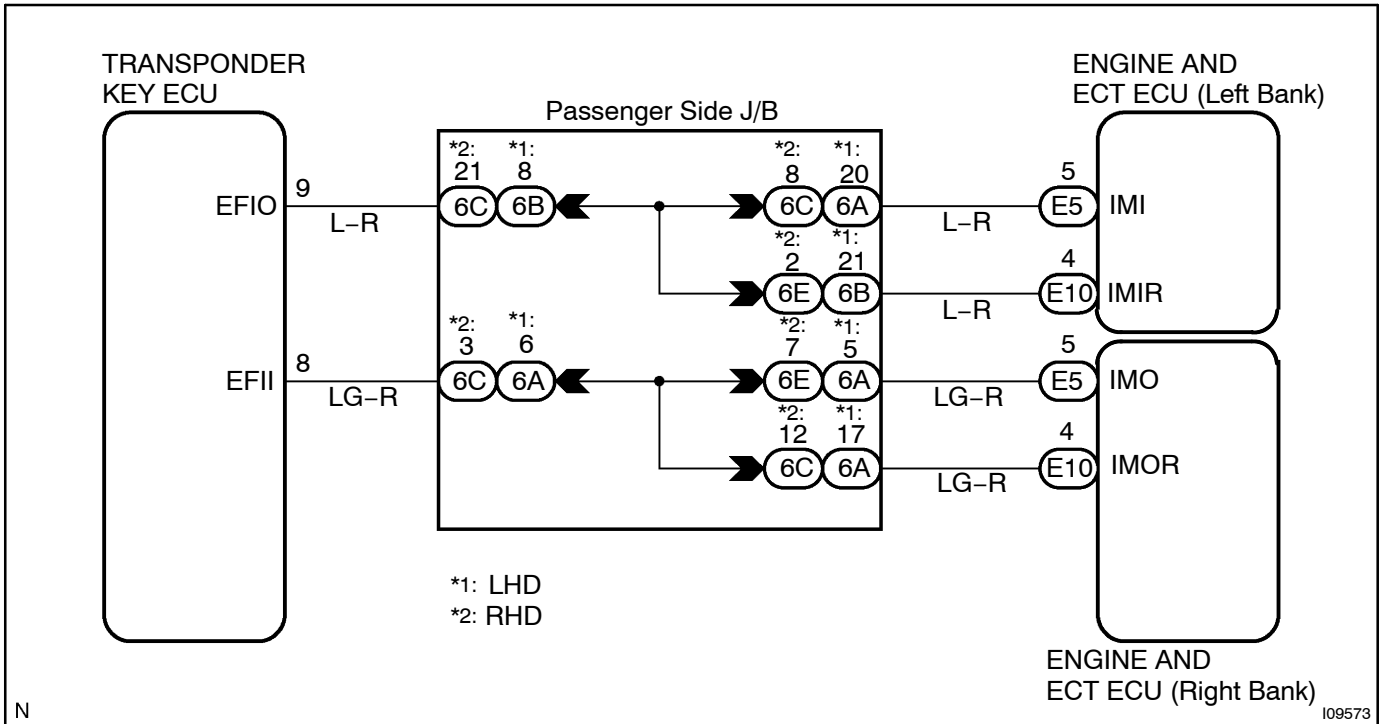

**INSPECTION PROCEDURE**

1 Check Engine and ECT ECU.

NG

Replace Engine and ECT ECU.

OK

2 Check for open and short in harness and connector between Engine and ECT ECU and transponder key ECU (See page N-30).

NG

Repair or replace harness or connector.

OK

Check and replace transponder key ECU (See page N-30).