

# AUTOMATIC TRANSMISSION (A342E)

## HOW TO PROCEED WITH TROUBLESHOOTING

DI2L4-03

Troubleshoot in accordance with the procedure on the following pages.

