


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 2 to 19, refer to page BO-105.

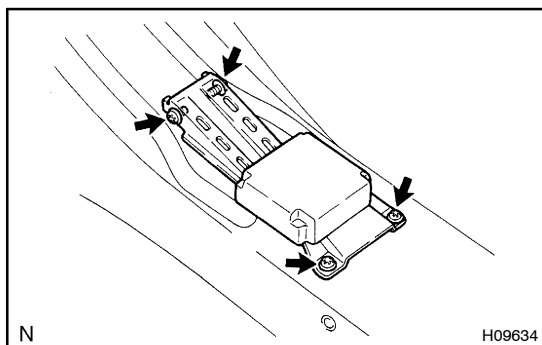

1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Using a torx wrench, install the airbag sensor assembly with 4 screws.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the airbag sensor connectors.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installing, shake the sensor assembly to check that there is no looseness.

2. INSTALL NO.1 CONSOLE BOX DUCT

3. INSTALL NO.2 CONSOLE BOX DUCT

4. INSTALL CONSOLE BOX

5. INSTALL HEATER TO FOOT NO.3 DUCT LH AND RH

6. INSTALL REAR CONSOLE BOX

7. INSTALL CASSETTE CASE HOLDER

8. INSTALL NO.1 CONSOLE UPPER PANEL GARNISH

9. INSTALL CONSOLE COMPARTMENT DOOR

10. INSTALL NO.2 CONSOLE REAR END PANEL

11. INSTALL NO.3 CONSOLE BOX DUCT

12. INSTALL BOX PANEL

13. INSTALL CONSOLE BOX REGISTER

14. INSTALL REAR CONSOLE ARMREST

15. INSTALL FRONT CONSOLE BOX

16. INSTALL CONSOLE UPPER PANEL

17. INSTALL SHIFTING HOLE COVER

18. INSTALL RADIO WITH A/C CONTROL ASSEMBLY

19. INSTALL CLUSTER FINISH PANEL