



## MAGNETIC CLUTCH RELAY INSPECTION

AC24X-01

1. REMOVE MAGNETIC CLUTCH RELAY FROM JUNCTION BLOCK NO. 2
2. INSPECT MAGNETIC CLUTCH RELAY CONTINUITY  
(See [page DI-847](#))